

PT-Link II LON[®] Technical Guide

VCB-X Controller Code: SS1051 Version 2.0
 VCM-X Controller Code: SS1026 & Y200920 Version 2.0 and up;
 VCM-X Modular Controller Code: SS1030 & SS1034
 VCM-X WSHP Controller Code: SS1032 & SS1033
 SA Controller Code: Y200921
 VCM Controller Code: SS1016, Y200409, Y200616, Y200822



Table of Contents

| | |
|--|----|
| General Information..... | 3 |
| Data Sharing | 3 |
| System Requirements | 3 |
| Dimensions and Components | 4 |
| Quick Guide..... | 4 |
| Connection and Wiring Information | 5 |
| Configuring the PT-Link II Controller..... | 6 |
| PT-Link II Hardware Connection | 6 |
| Computer IP Address Set-up for Windows NT & XP | 7 |
| Computer IP Address Set-up for Windows Vista & 7 | 8 |
| Running RUINET..... | 9 |
| Uploading Config.csv to the PT-Link II | 10 |
| Downloading Config.csv to the PT-Link II | 11 |
| Implicit and Explicit Addressing | 12 |
| Troubleshooting the PT-Link II Controller..... | 14 |
| PT-Link II Board LEDs..... | 14 |
| ProtoCessor Module LEDs..... | 15 |
| Troubleshooting Using RUINET | 16 |
| Verifying Proper Communications | 16 |
| Verifying Proper Values | 16 |
| Updating the PT-Link II Controller..... | 17 |
| Data Arrays | 21 |
| Table 2: VCB-X Modular Data Array for Field Server | 21 |
| Table 3: VCM-X Modular Data Array for Field Server..... | 21 |
| Table 4: VCM-X WSHP (Tulsa) Data Array for Field Server..... | 22 |
| Table 5: VCM-X WSHP (Coil) Data Array for Field Server | 22 |
| Table 6: VCM-X Data Array for Field Server..... | 23 |
| Table 7: SA Controller Data Array for Field Server | 23 |
| Table 8: VCM Data Array For Field Server | 24 |
| Appendix A..... | 24 |
| RJ-45 8P8C Cable for WattMaster Cross Over Networking - WattMaster Part #HZ000136..... | 24 |
| Appendix B..... | 25 |
| External Interface Files (XIF Files)..... | 25 |
| Appendix C - VCB-X LON Parameters | 26 |
| Appendix D - VCM-X Modular and VCM-X WSHP LON Parameters | 33 |
| Appendix E - VCM-X LON Parameters | 35 |
| Appendix F - SA Controller LON Parameters | 41 |
| Appendix G - VCM LON Parameters | 45 |

WattMaster Controls, Inc.
8500 NW River Park Drive · Parkville, MO 64152
Toll Free Phone: 866-918-1100
PH: (816) 505-1100 · FAX: (816) 505-1101 · E-mail: mail@wattmaster.com
Visit our web site at www.orioncontrols.com
Form: OR-PTLNK-II-LON-TGD-01E Copyright January 2012 WattMaster Controls, Inc.
LON® and LONWorks® are registered trademarks of Eschelon Corporation.
WattMaster Controls, Inc. assumes no responsibility for errors, or omissions.
This document is subject to change without notice.

The OE368-23-LON, PT-Link II LON, provides bi-directional communication between ONE* of the following types of Orion controllers—VCB-X, VCM-X, SA, VCM, MUA II, or VAV/CAV:

VCB-X Controller (SS1051)

VCM-X Controller (SS1026, SS1030, SS1032, SS1033, SS1034, Y200920)

SA Controller (Y200921)

VCM Controller (SS1016, Y200409, Y200616, Y200822)

** MUA II Controller (Y200405); VAV/CAV Controller (Y200301)

To determine what controller you have, you must look at the label located on the controller EPROM. If the controller label does not match any of the SS or Y numbers listed above, your controller will not work with the PT-Link II LON®.

*NOTE: The PT-Link II LON device can be used to connect to only one Orion controller. If more than one Orion controller is present in a system, each one will require a PT-Link II LON device for integration with a LON protocol network.

**NOTE: Documentation is available for MUA II/VAV/CAV on our Orion Controls website: www.orioncontrols.com/literature-new.html

Data Sharing

The PT-Link II LON interface provides the following data sharing capabilities:

- Provides values from points on the Orion side of the gateway to LON® devices as if the values were originating from LON® objects.
- Allows LON® devices to modify point values on the Orion controller side of the PT-Link II LON® by using standard LON® write services.

Hardware Specifications

Table 1 contains the hardware specifications for the PT-Link II LON® interface.

| Technical Data | |
|----------------------------|---------------------------------|
| LON® Loop | TP/FT-10 (78 Kps) |
| Controller Loop | RS-485, 9600 Baud Rate |
| Network Protocol | LONWorks® |
| Protocol (WattMaster Loop) | HSI Open Protocol Token Passing |
| Power Input Voltage | 24 VAC |
| Power Consumption | 10 VA Maximum |
| Operating Temp | -30°F to 150°F |
| Operating Humidity | 90% RH Non-Condensing |
| Weight | 4.7 oz. |

Table 1: PT-Link II LON® Interface Technical Data

System Requirements

- The PT-Link II LON® interface is packaged and assembled as surface mount. Surface mount components are included for your convenience.
- Computer running Microsoft Windows™ operating system.
- Ethernet Crossover Cable (supplied).
- PT-Link LON & RUINET software—included on CD-ROM and also downloadable from www.orioncontrols.com/software-new.html.

Setting Up Your PT-Link II

Quick Guide

The following steps will get you up and running in no time:

1. Familiarize yourself with the PT-Link II components (**Figure 1**).
2. Connect your PT-Link II to the Controller on your system (only one) and connect your PT-Link II to the LON Network (**Figure 2**).
3. Copy the contents of the PT Link CD to your PC's Desktop. You can also download the files from <http://orioncontrols.com/software-new.html> under PT-Link II Setup Files.
4. Connect your PT-Link II to your computer using an Ethernet connection (**Figures 3 & 4**).
5. Change your PC's IP Address. Follow the directions that match your current operating system - Windows NT, XP, Vista, or 7. See directions on **pages 7 & 8**.
6. Using RUIINET, edit the Config.csv file and verify PT Link communications. Follow the directions on **pages 9-13**.
7. If you run into any problems, follow the instructions in the Troubleshooting section starting on **page 14** of this guide.

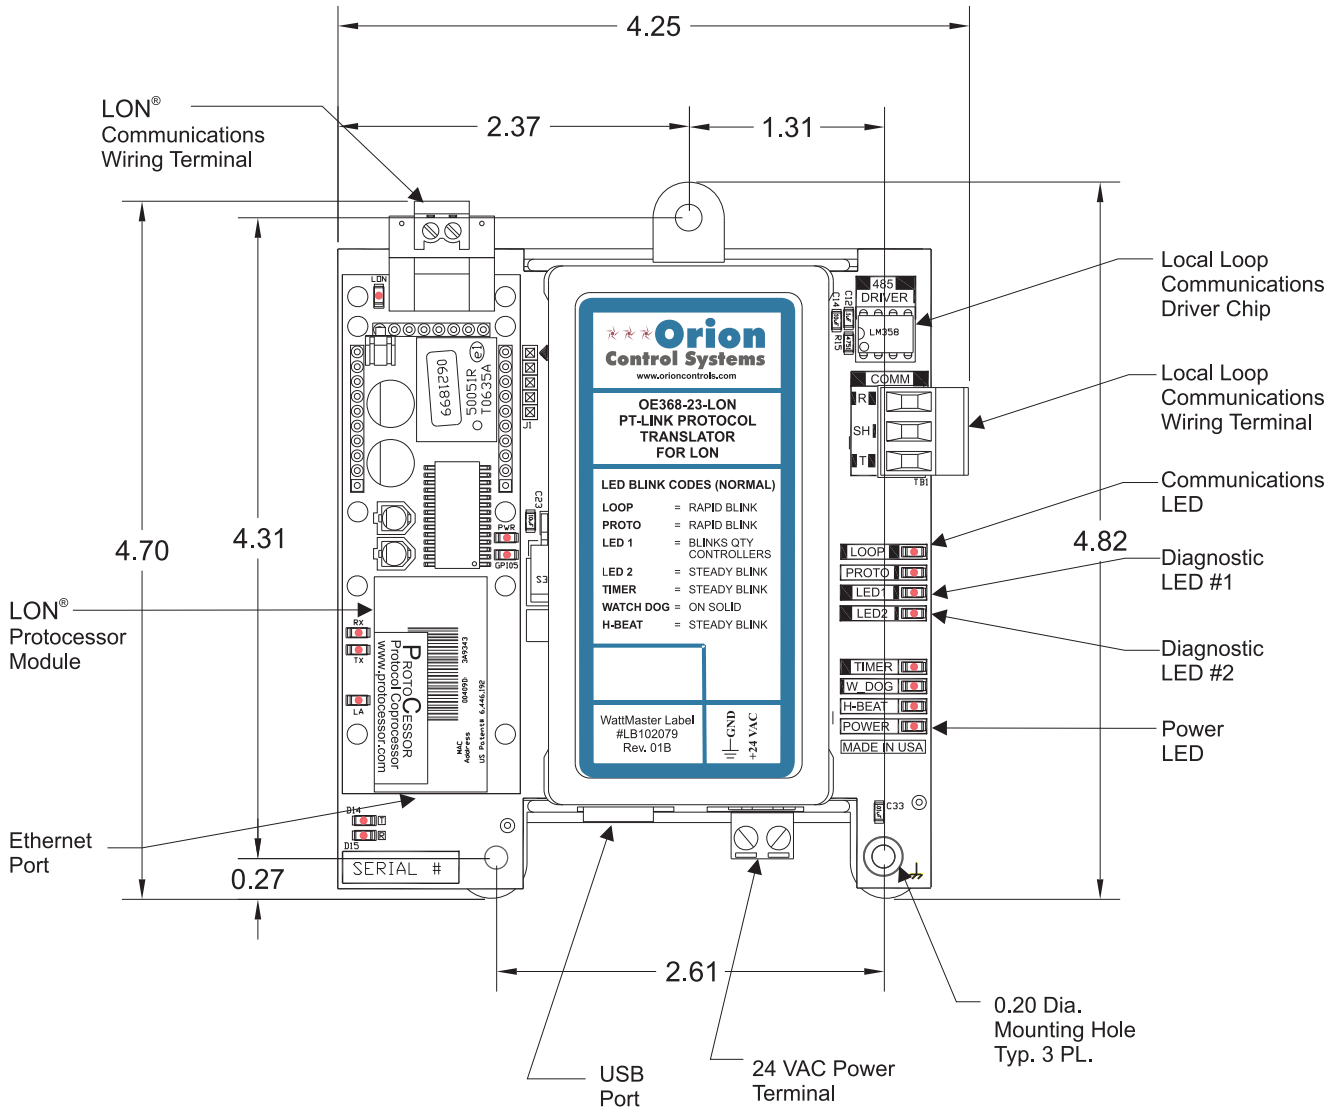


Figure 1: PT-Link II LON® Dimensions and Components

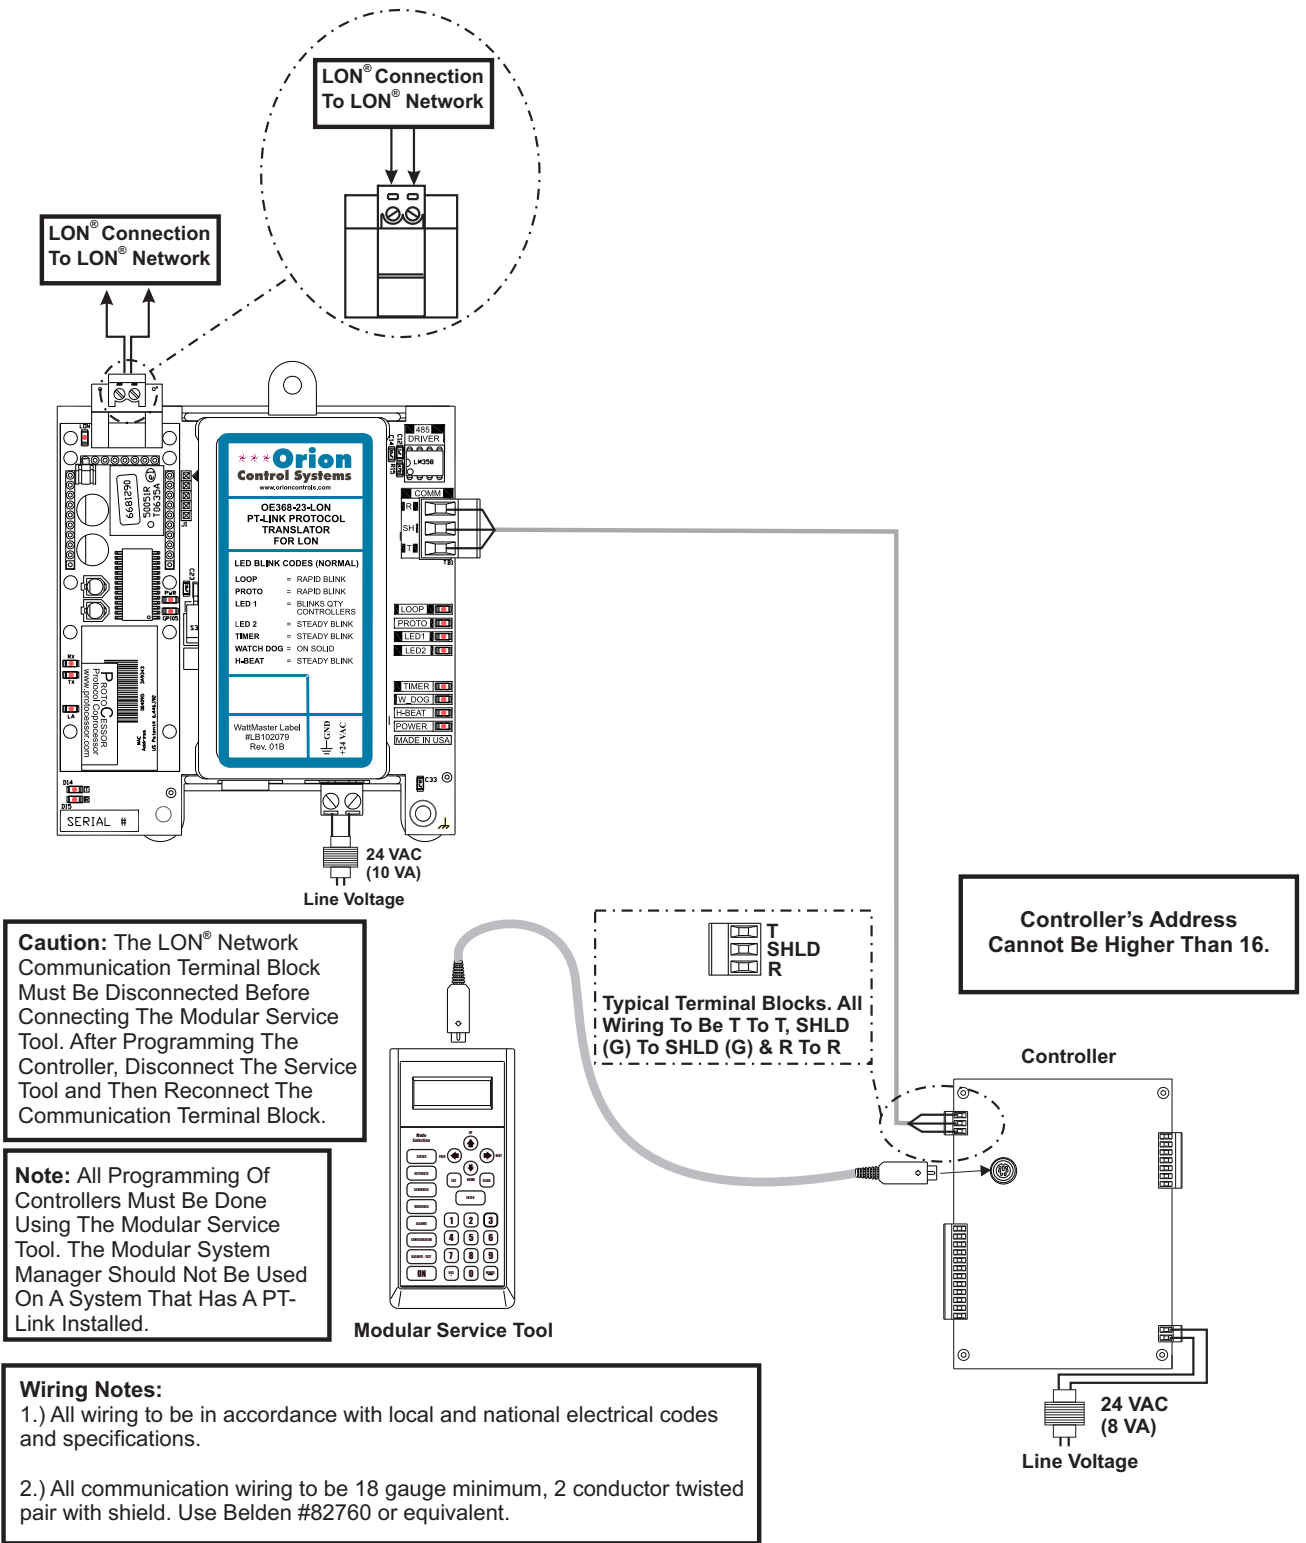


Figure 2: PT-Link II LON[®] Interface Wiring

PT-Link Ethernet Connection

PT-Link Hardware Connection

You have two options for connecting the PT-Link to your PC via Ethernet:

- 1.) You may connect the PT-Link directly to your PC by using a crossover cable (by others) as shown. See **Figure 3** for details.
- 2.) You can also connect both your PC and the PT-Link to an Ethernet Hub with standard CAT5 cables. See **Figure 4** for details.

Locate a CAT5 cable and plug one end into your computer's Ethernet port (use a crossover cable if connecting directly to the PT-Link). If connecting directly, plug the other end of the Cable into the Ethernet port on the PT-Link. If connecting through an Ethernet Hub, plug the other end of the PC cable into the hub, and use a second CAT5 cable to connect the PT-Link to the hub as well.

Power up the PT-Link by plugging in the power cable. The PT-Link may take up to three minutes to power up completely. Once the PT-Link is powered up, you should notice that the green "GPI05" LED light on the ProtoCessor Board remains on continuously. See **Figure 19** on page 12 for a diagram showing the location of the ProtoCessor "GPI05" LED.

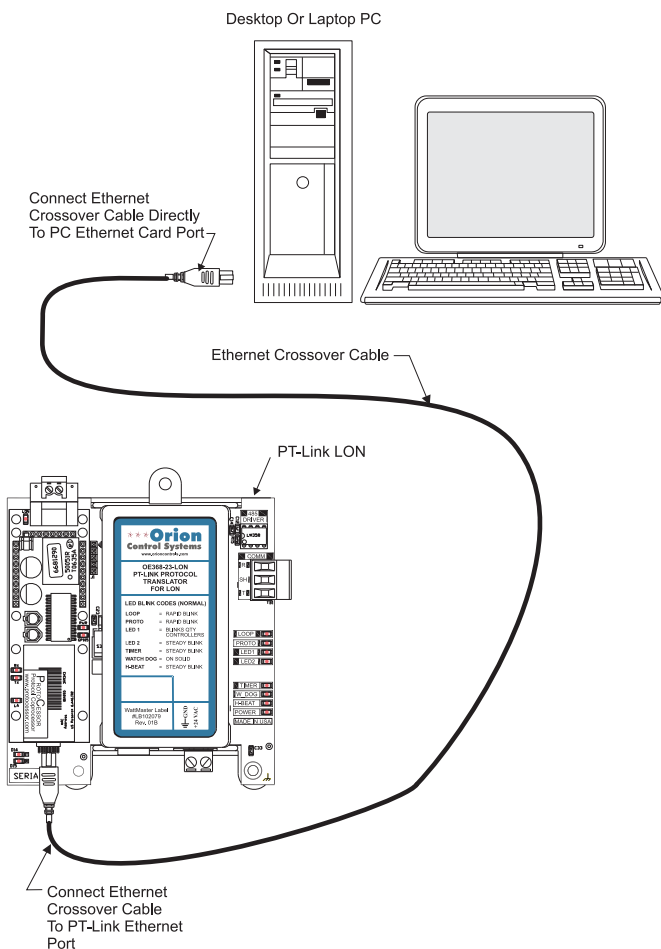


Figure 3: Connecting With Crossover Cable

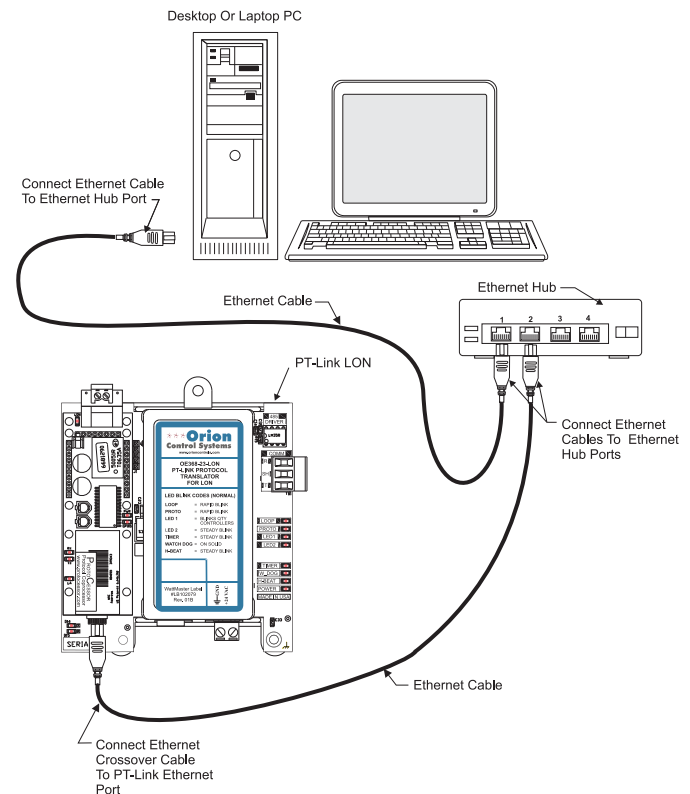


Figure 4: Connecting With Ethernet Cable & Hub

Computer IP Address Set-up for Windows XP, Vista, and 7

In order for the PT-Link II to communicate properly, it is imperative to set the IP address of both the PT-Link II as well as the computer to be within the same netmask. You need to change the IP address on your computer. The following instructions will explain how to configure the IP address for Microsoft® Windows XP, Vista, and 7 operating systems.

Computer IP Address Set-up for Windows NT & XP

- 1.) Click <start>; then click <Control Panel>.
- 2.) Double-click on the **Network Connections** icon. The *Network Connections Window* will appear (**Figure 5**).

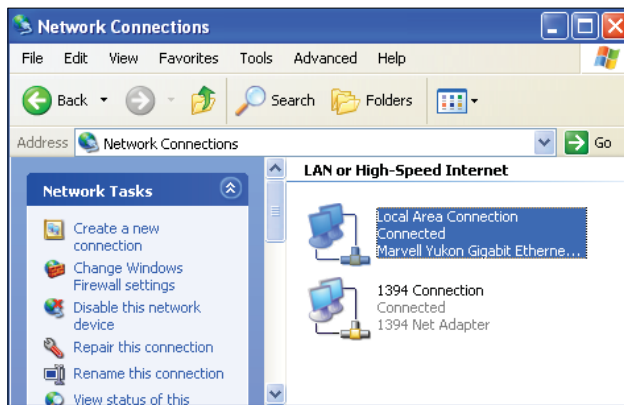


Figure 5: Network Connections Window

NOTE: If any wireless connections are listed, disable them by *right-clicking* the connection and *selecting* <Disable>.

- 3.) In the *Network Connections Window*, double-click the **Local Area Connections** entry. The *Local Area Connection Status Window* will appear (**Figure 6**).

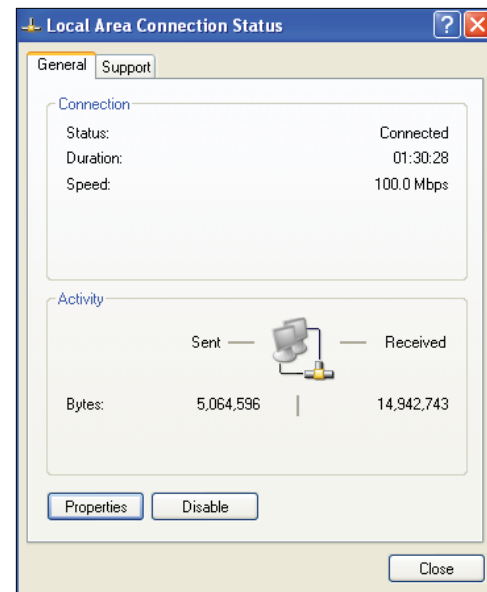


Figure 6: Local Area Connection Status Window

- 4.) As shown in **Figure 6**, click <Properties> in the lower left of the window. The *Local Area Connection Properties Window* will appear.

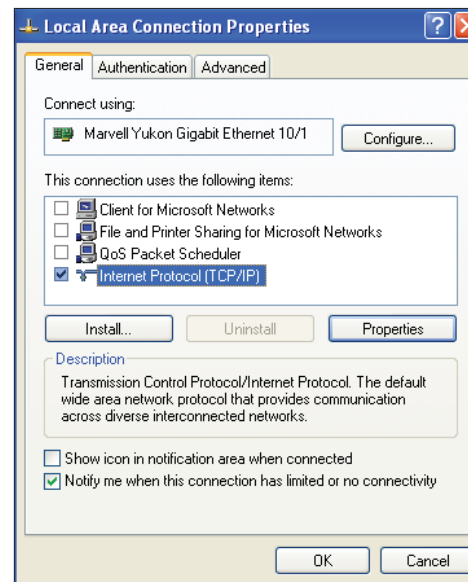


Figure 7: Local Area Connection Properties Window

- 5.) As shown in **Figure 7**, in the Connection Items list box, be sure the **Internet Protocol (TCP/IP)** is checked. Select the **Internet Protocol (TCP/IP)** item to highlight it and then click <Properties>. The *Internet Protocol Properties Window* will appear.

Configuring the PT-Link Controller

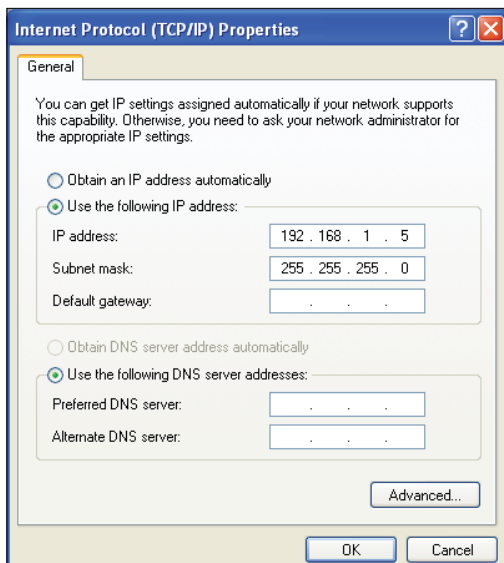


Figure 8: Internet Protocol Properties Window

- 6.) *Select* the radio button in front of **Use the following IP address (Figure 8)** and *write down* the current defaults so that you can re-enter them when you finish configuring the PT-Link II and then *type in* the following information:
 - a.) IP address 192.168.1.5
 - b.) Subnet mask 255.255.255.0
 - c.) Default Gateway is blank
- 7.) *Click* <OK> until all of the above network configuration windows are closed. You may have to *reboot* the computer before the new values are valid.

Computer IP Address Set-up for Windows Vista & 7

- 1.) *Click* <start>; then *click* <Control Panel>.
- 2.) *Click* on the **Network and Internet** icon.
- 3.) *Click* **Network and Sharing Center**.
- 4.) From the shaded box in the left side of the window, select **Manage Network Connections** (Vista) or **Change adapter settings** (Windows 7).
- 5.) *Right-click* on the **Local Area Connection** icon and *select* <Properties> for the drop down window.
- 6.) *Choose* **Internet Protocol Version 4 (TCP/IPv4)** by highlighting it and then *click* <Properties>. The *Internet Protocol Properties Window* will appear (**Figure 8**).
- 7.) *Select* the radio button in front of **Use the following IP address (Figure 8)** and write down the current defaults so that you can re-enter them when you finish configuring the PT-Link II and then *type in* the following information:
 - a.) IP address 192.168.1.5
 - b.) Subnet mask 255.255.255.0
 - c.) Default Gateway is blank
- 9.) *Click* <OK> until all of the above network configuration windows are closed. You may have to *reboot* the computer before the new values are valid.

Connecting To The PT-Link II

1.) In order to communicate and program the PT-Link II you will need to install RUINET software on your computer. If you do not have the software, it is available for downloading at www.orioncontrols.com/software-new.html under PT-Link II Software

WARNING: Make sure to load RUINET onto your hard drive and run the program from your hard drive. DO NOT under any circumstances run RUINET from your cd drive.

2.) If RUINET is in the desktop directory (if it isn't, locate its directory), double-click on RUINET, and the RUINET program should run. Initially, you might see the screen below (**Figure 9**). Type <I> for Specify IP Address and the message "Enter IP Address of the Field Server to Connect to" will appear on the screen.

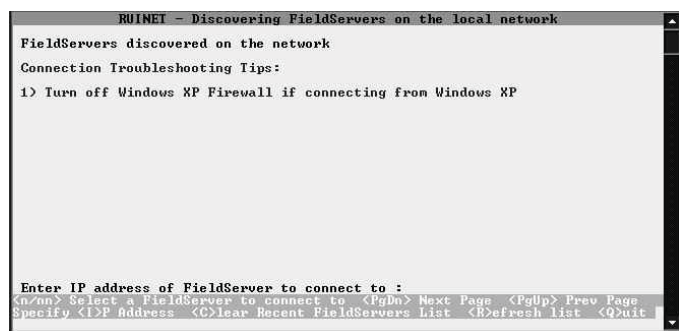


Figure 9: RUINET PT-Link II Specify IP Address

3.) Type the IP Address of <192.168.1.24> and press <Enter>.

4.) If you have only one PT-Link II connected to the network, then RUINET will automatically connect to that particular PT-Link II; otherwise, a menu will appear to allow the selection of the desired PT-Link II.

NOTE: If RUINET is unable to establish a connection, there are a few simple procedures you can perform to try to determine the problem. To verify your network cables, observe the green LED displayed directly above and to the right of the Ethernet port. This LED should be on if the 10 BaseT cable is good. Secondly, observe the red LED displayed directly above and to the left of the Ethernet port. This LED should be solid while RUINET is running. If the LEDs are lit as expected, and RUINET still does not receive replies, then the netmask is probably incorrect. If this does not help, then your Ethernet setup on your PC is possibly not compatible. Ensure that you have an Ethernet adapter installed in your software configuration and that it is configured to run the TCP/IP protocol. If you are still unable to connect, please contact WattMaster Controls.

5.) On subsequent connections, a list of PT-Link II s that have been recently connected may appear under the message "Recently connected to FieldServers". Select the required PT-Link II by typing the Number or Letter in the left hand column. (**Figure 10**).

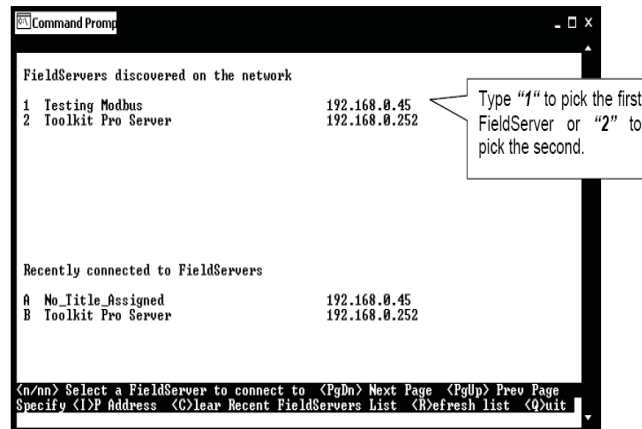


Figure 10: RUINET PT-Link II Selection Menu

6.) Once connected, you will see the *RUINET Main Menu* (**Figure 11**). Unless you need to make changes to the config.csv file (see steps 9-13), you are now ready to send and receive files to and from the PT-Link II.

NOTE: If you are installing a LON PT Link and the LON BAS is using implicit addressing, no changes need to be made to the config.csv file and you can skip to step 14.

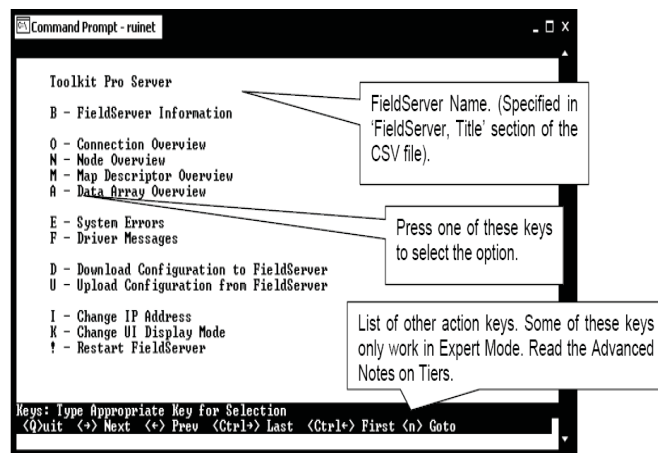


Figure 11: RUINET PT-Link II Main Menu

Changing the Config.csv File

NOTE: The PT-Link II contains an external interface file otherwise called an XIF file (fserver.xif). The XIF file includes information such as SNVT names and LON network information. This file can be uploaded for use with LON programming software. When uploaded, these files can be located in the same directory that the RUINET executable file is stored and run from. Be sure when uploading that the correct file is specified in the upload window. Refer to **Figures 12 & 13** for screen details. Refer to Appendix B for details on uploading XIF files.

7.) Type the letter <U> to upload the Config file (**Figure 12**), then type <U> again (**Figure 13**) for Upload.

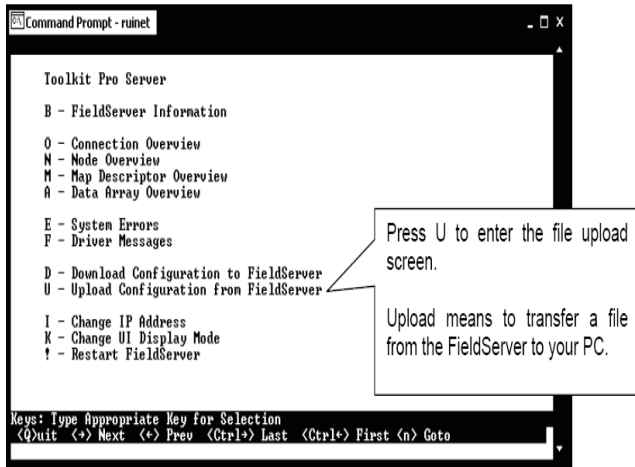


Figure 12: RUINET PT-Link II Main Menu - Upload

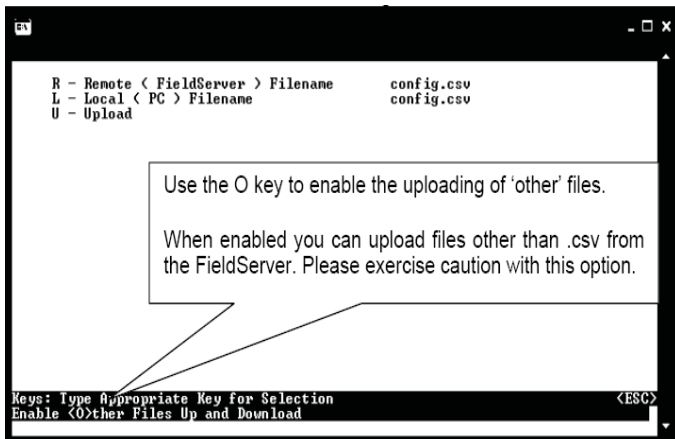


Figure 13: RUINET PT-Link II Upload

8.) You will get confirmation that the upload is complete. Type <N> to open the config.csv file in Notepad.

WARNING: Only edit the config.csv file using Notepad. **DO NOT** use Excel. Using Excel to edit the config.csv file will corrupt its contents!

9.) Follow the directions under “Explicit and Implicit Addressing” on **pages 12 & 13** to make changes to the config.csv file.

10.) Once the changes are made to the config.csv file, click <File> in the upper left and then click <Save>. Now close the file and return to the *RUINET Main Menu*.

11.) From the *RUINET Main Menu*, type <D> to Download the new config.csv file to the FieldServer (**Figure 17**).

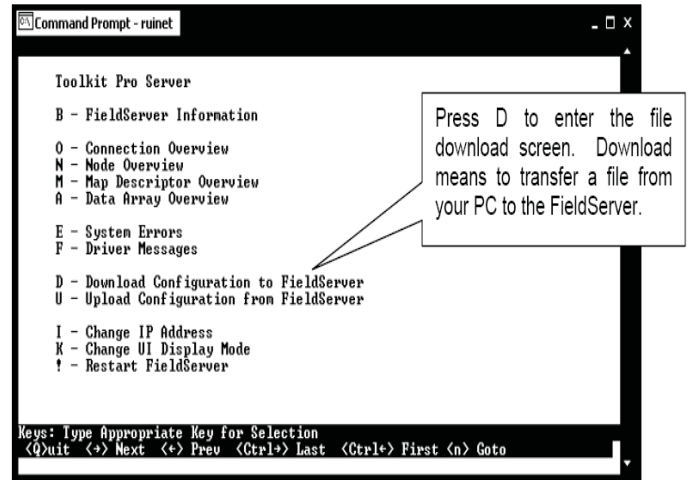


Figure 14: Download new Config.csv file

12.) At the next screen, (Figure 18), type <D> again.

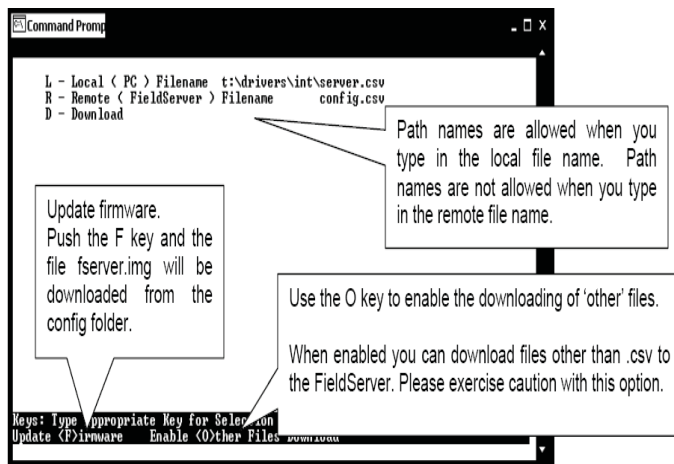


Figure 15: Download new Config.csv file

NOTE: The utility will indicate when downloading is complete. **DO NOT** reset the PT-Link II until this message is displayed, as this will corrupt the PT-Link II.

NOTE: The Remote Filename option must always be named “**config.csv**” for configurations; otherwise, it will be ignored by the PT-Link II.

13.) Once the download is complete, *restart* the PT-Link II by cycling power or *press* <Esc> to get back to the *RUINET Main Menu* and then *type* <!> option to save the new configuration file and restart RUINET. It is possible to do multiple downloads to the PT-Link II before resetting it. There will be a start-up period where you will be unable to connect to the PT Link.

14.) From the *RUINET Main Menu*, *type* <A> for the Data Array Overview. The *Data Array Overview Screen* will display (**Figure 16**).

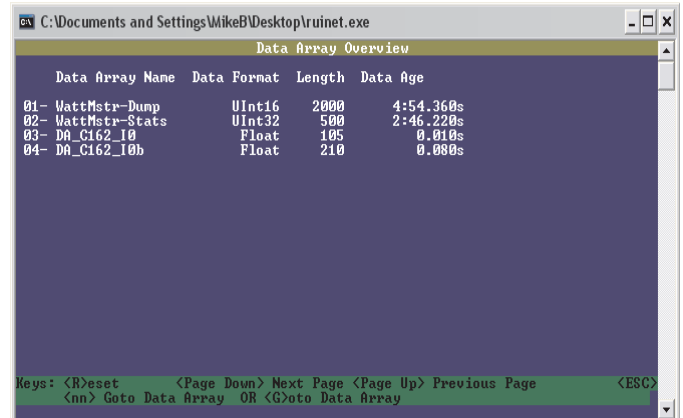


Figure 16: Data Array Overview Screen

15.) This screen (**Figure 16**) will verify communication to the HVAC units. Lines 1 & 2 should always be present. After a start-up period of approximately 4 minutes, you will see 2 additional lines as shown. This screen represents the PT Link communicating with 1 HVAC unit.

16.) Once these steps have been completed and you have verified that the reconfigured PT Link has established communication to the HVAC unit, it can now be added to the BAS network.

Implicit Addressing

Explicit and Implicit Addressing

Clients can address the PT-Link using explicit or implicit addressing. Clients using explicit addressing obtain their data transfer parameters directly from the PT-Link II LON configuration file (config.csv). Implicit addressing is used when a Network Management Tool such as LonMaker® is used to connect a PT-Link II LON to other LonWorks nodes—the PT-Link II LON is assigned its data transfer (binding) parameters by the Network Management Tool.

NOTE: The PT-Link II LON is configured from the factory to use implicit addressing.

Implicit Addressing — Network Manager assigns addresses for communication and ensures (via address tables in the devices) that communication connections are known.

Explicit Addressing — Device knows the address of the point in the remote device and communicates directly without the assistance of the Network Manager.

Implicit Addressing Commissioning Using LonMaker

- 1.) Ensure that the correct firmware and latest configuration is loaded on the PT-Link II LON.

NOTE: Each change in the PT-Link II LON requires re-commissioning of the PT-Link II LON in LonMaker.

- 2.) Ensure that the PT-Link II LON and the LonMaker machine are on the same network.
- 3.) *Open* the existing Network in LonMaker or create a new Network.
- 4.) *Click* on **Create New Network** and follow the network wizard, making the following selections:

Network Interface: Choose Network Attached

Management Mode: Choose Onnet unless you are working offline

Registered Plug-ins required: None

- 5.) Once Visio is open with the Network showing, drag a new device onto the drawing from the toolbox.

- 6.) Follow the Device Network, making the following selections:

Enter Device Name: Choose commission device

Specify Device Template: Choose upload from device

Specify Device Channel: Choose Auto Detect

Specify Device Properties: Leave as is (Ping is optional)

Identify Device: Choose service pin

Device Application Image: Leave unchecked

Initial State: Leave as is

- 7.) Press the service pin on the PT-Link II LON when asked to do so, and the PT-Link II LON will be commissioned.
- 8.) Drag a new function block onto the drawing from the toolbox. Give the function block a name and ensure that it is allocated to the PT-Link II LON device.
- 9.) Once the function block is on the drawing, you can drag input and output variables onto the function block. When you do this, LonMaker will show you the variables available for binding. Click on the variables you require (or use the select “all” option), and they will be commissioned onto the function block.
- 10.) You are now ready to connect these variables to other devices by dragging connections from the toolbox and connecting the variables.

Explicit Addressing & Domain Table Setup

To use explicit addressing, the client needs to change the factory settings contained in the PT-Link II LON's configuration file (config.csv). The following are the steps to change the configuration file from implicit to explicit addressing:

- 1.) Upload and open the config.csv file.
- 2.) Locate the "Connections" section.
- 3.) Locate the "Lonworks_Server" column and change the value from "Implicit" shown in **Figure 17** to "Explicit" shown in **Figure 18**. You should also change the "Lonworks_Input" and "Lonworks_Outputs" from Update to Polled.

```
Connections
Port ,Baud ,Data_Bits ,Stop_Bits ,Parity ,Protocol ,Auto_Config_Client ,Auto_Config_Server , Lonworks_Server, Lonworks_Inputs, Lonworks_Outputs,
S1 ,38400 ,8 ,1 ,None ,wattmstr ,Yes ,Lonworks , Implicit , Update , Update
...
```

Figure 17: PT-Link II LON Implicit Configuration

```
Connections
Port ,Baud ,Data_Bits ,Stop_Bits ,Parity ,Protocol ,Auto_Config_Client ,Auto_Config_Server, Lonworks_Server, Lonworks_Inputs, Lonworks_Outputs,
S1 ,38400 ,8 ,1 ,None ,wattmstr ,Yes ,Lonworks , Explicit , Polled , Polled
...
```

Figure 18: PT-Link II LON Explicit Configuration

In addition, the PT-Link II LON must have its domain, subnet, and node IDs set. This feature is enabled in the configuration file by filling out the Title and System_Address fields of the PT-Link II LON parameters as follows:

```
//=====
//
// Common Information
//
Bridge
System_Address ,Title
23 ,":D48:501:Wattmaster Explicit Lon v1.00d"
```

Figure 19: PT-Link II LON Domain and Subnet Setting

The Title field must start with "D", followed by the domain_id in hexadecimal notation, followed by "S", followed by the subnet_id in hexadecimal notation, and enclosed by ":". The domain length is automatically determined by the number of digits in the [domain_id] field. With 2 hexadecimal digits constituting 1 byte, "D123456", for example, would have a length of 3.

Once the domain table has been set, the "Dxx:Sxx:" part of the Title field will be removed.

Now the Title field will be left with [Title continued...] which may be the Node self documentation string or any title.

Troubleshooting the PT-Link Controller

PT-Link II Board LEDs

The PT-Link II LON® is equipped with LEDs that can be used for troubleshooting. There are eight LEDs on the PT-Link II board. See **Figure 20** for the locations of the LEDs on the PT-Link II board. The LED descriptions and functions are listed in the following paragraphs.

POWER LED

When the PT-Link II LON® is powered up, the **“POWER”** LED should light up and stay on continuously. If it does not light up, check to be sure that you have 24 VAC connected to the board, that the wiring connections are tight, and that they are wired for correct polarity. The 24 VAC power must be connected so that all ground wires remain common. If after making all these checks the **“POWER”** LED still does not light up, please contact WattMaster Controls Technical Support at our Toll Free number—866-918-1100—for assistance.

LOOP LED

When power is applied to the PT-Link II LON® the **“LOOP”** LED will also light up. The LED should flicker rapidly, indicating that the PT-Link II is trying to communicate with the controllers on the loop. A **“flicker”** is defined as a brief moment when the LED turns off and back on. If the **“LOOP”** LED does not operate as indicated above, first power down the unit and then reapply power. If this does not work, please contact WattMaster Controls Technical Support at our Toll Free number—866-918-1100—for assistance.

LED 1

When power is first applied, **“LED 1”** will be off temporarily and then will blink one time for each controller it is communicating with. For example, if you have 4 controllers on the loop connected to the PT-Link II, **“LED 1”** will blink 4 times. If the amount of blinks does not match the number of controllers connected to the loop, it indicates there is a communications problem. The best way to find out which board is not communicating is to go to each controller and look at its **“COMM”** LED. The **“COMM”** LED should be solid and will flicker occasionally indicating communication with the PT-Link II LON®. If the **“COMM”** LED does not flicker, there is no communication with that controller.

LED 2

When power is first applied, **“LED 2”** will be off temporarily and then will blink slowly indicating that the PT-Link II baseboard is communicating with the ProtoCessor Module. If **“LED 2”** does not blink, check that the ProtoCessor Module is installed correctly on the PT-Link II baseboard and that the **“PWR”** LED is lit up on the ProtoCessor Module.

PROTO LED

When the PT-Link II is first powered up, the **“PROTO”** LED should light up and blink continuously. This LED verifies communication with the board and the ProtoCessor. If the LED doesn't light up, check that the ProtoCessor is installed correctly and firmly connected to the Base Board. The **“PWR”** LED should also be lit on the ProtoCessor Module.

TIMER LED

The **“TIMER”** LED is used for troubleshooting by WattMaster Controls Technical Support. The **“TIMER”** LED should always be blinking steadily.

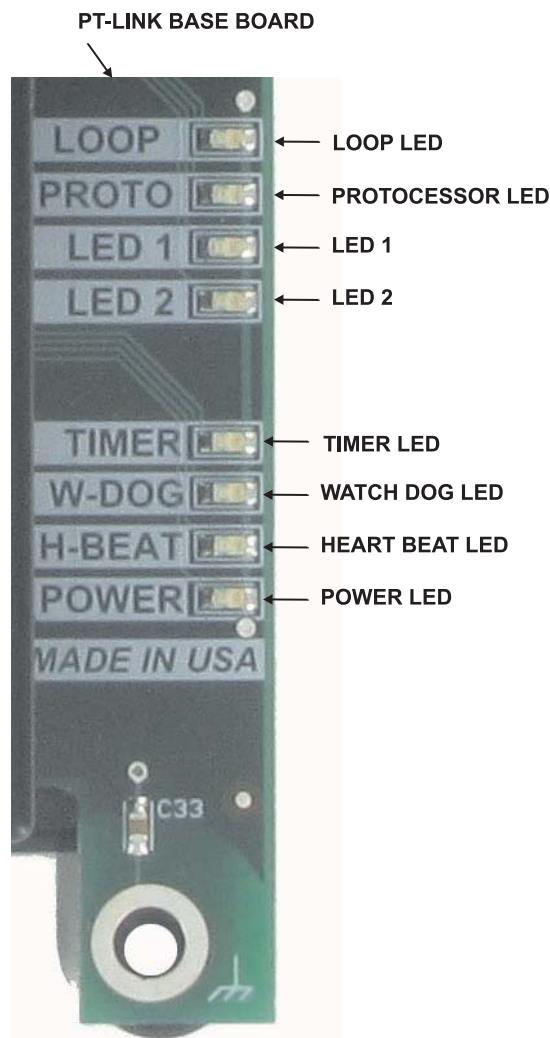


Figure 20: PT-Link II LON® LED Locations

WATCH DOG LED

The **“W-DOG”** LED is used for troubleshooting by WattMaster Controls Technical Support. The **“W-DOG”** LED should always be on solid.

HEARTBEAT LED

The **“H-BEAT”** LED blinks to show the PT-Link II board software is running. If the LED doesn't light up, and all other checks have been made, please contact WattMaster Controls Technical Support at our Toll Free number—866-918-1100—for assistance.

ProtoCessor Module LEDs

PWR LED

When the PT-Link II is first powered up, the “**PWR**” LED should light up and stay on continuously. See **Figure 21**. If the LED doesn’t light up, check that the ProtoCessor is installed correctly and firmly connected to the Base Board.

GPI05 LED

The “**GPI05**” LED will light up when the Base Board and the ProtoCessor Module have established communications. See **Figure 21**. This can take up to 3 minutes depending on the number of units connected to the PT-Link II. If it fails to light up after 3 minutes, check that the ProtoCessor is installed correctly and firmly to the Base Board.

LON LED

Once the unit is powered up, the “**LON**” LED will blink continuously until the PT-Link II has been commissioned. Once commissioned, the “**LON**” LED will remain off.

LA LED

Once the unit is powered up, the “**LA**” LED must be blinking constantly. See **Figure 21**. If this LED is constantly on or off, the Module is not working properly and needs to be replaced.

TX & RX LEDs

The “**TX**” and “**RX**” LEDs work together to indicate that communication is being established with the desired protocol network. If both LEDs are blinking, then communication is working properly. See **Figure 21**. If not, check the protocol network wiring and the baud rate in the configuration file.

D14 & D15 LEDs

The “**D14**” and “**D15**” LEDs work together to indicate that communication is being transmitted and received from the USB Port when performing an update to the PT-Link II software.

If all of these tests are made and the controller still doesn’t operate, please contact WattMaster Controls Technical Support at our Toll Free number—866-918-1100—for assistance.

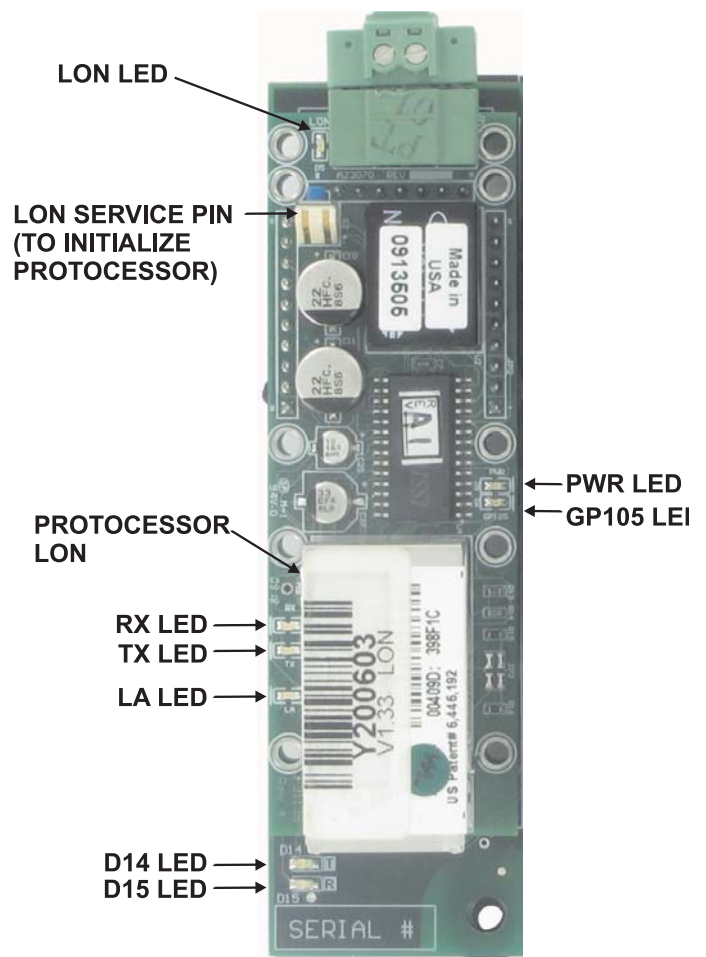


Figure 21: PT-Link II LON® LED Locations

Using RUINET

Using RUINET

Before continuing with the troubleshooting, make sure the PT-Link II is connected correctly and the RUINET software is installed, running, and functioning correctly.

Verifying Proper Communications

From the *RUINET Main Screen*, press <O> to go the *Connection Overview Screen*. This screen supplies information on communication between the PT-Link II and remote devices. A number of aspect screens are available, and some of the aspect screens have more than one page. Use the space bar to toggle between aspects and use the <PgUp> and <PgDn> keys to toggle between pages of the same aspect. The *Connection Overview and Settings Aspect Screen* is shown in **Figure 22**.

The main purpose in this screen is to verify that messages and characters are being transmitted and received. In addition, it shows the number of communication errors. If the PT-Link II connection “03” is the protocol connection, verify that is communicating appropriately. If it is not, check that the PT-Link II LEDs are working properly, the unit is wired correctly, and the PT-Link II is configured correctly. If the number of errors is constantly increasing, move to the *Error Screen* by pressing the <Space Bar> 3 times to find out the cause of the errors. Use the <PgUp> and <PgDn> keys to toggle between pages of the *Error Screen*.

Verifying Proper Values

To verify that the correct values for each unit are being communicated to the PT-Link II, move to the *Data Array Overview Screen*. To get to the screen, press <A> from the *RUINET Main Menu*. See **Figure 23** for screen details.

In the *Data Array Overview Screen* (**Figure 23**) you will be able to see the data arrays of all the units connected to the PT-Link II denoted by an array name “DA_XXX_IY”—Y being the address of the unit minus one. The Address of the unit is determined by a set of dip switches. To view the values being communicated from a specific unit, move to the *Data Array Detail Screen* (**Figure 24**) of the unit by entering the number under which it is listed. For example, for the unit listed in the third position, enter <O3>.

To understand what each value means, look at the Data Array Tables for the desired unit type, VCM-X, SA, or VCM. You can change the writable values from this screen by using the modify command. To use the modify command, press <M> from the *Data Array Detail Screen* and then enter the Offset you want to change followed by a space and the new value.

Example: To change the Cooling Supply Setpoint to 60 in the VCM, press <M>, enter <58 60>, and then press <Enter>. This could be useful to prove that the unit can take and keep the setpoints properly.

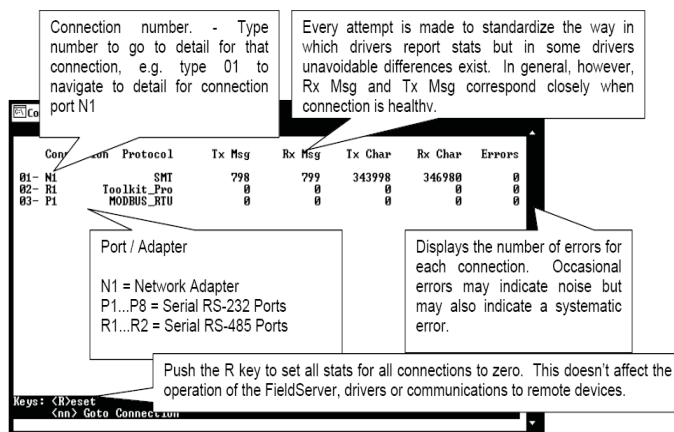


Figure 22: Connection Overview Screen

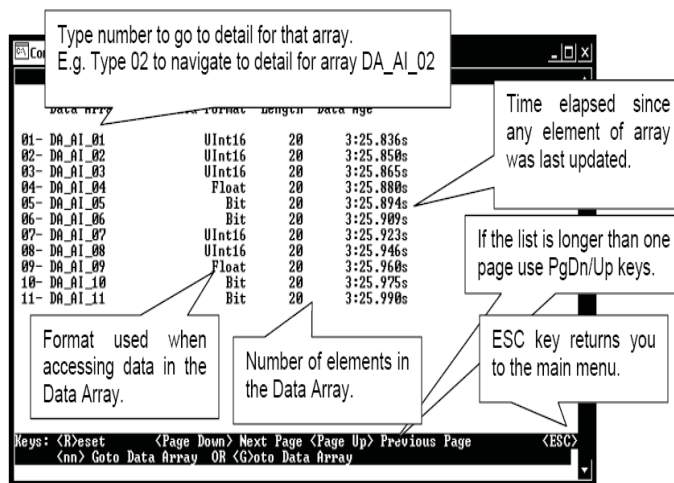


Figure 23: Data Array Overview Screen

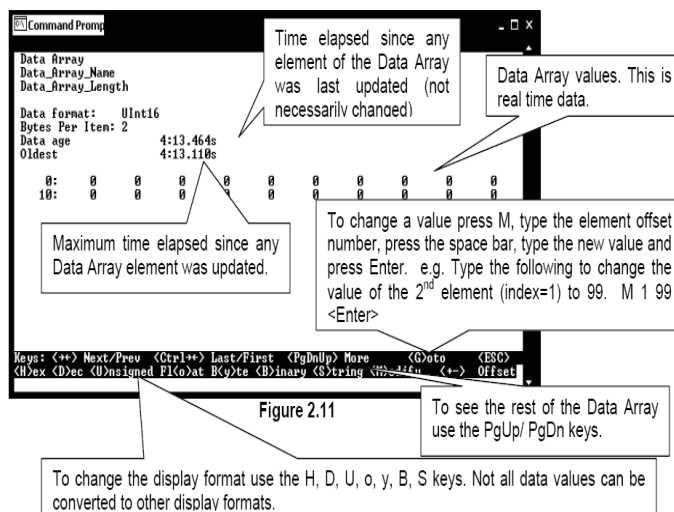


Figure 24: Data Array Detail Screen

Updating the PT-Link II Controller

Programming the PT-Link II with BootLoader

The PT-Link II is equipped with the ability to update its software with the use of a computer. You will need the following before you begin:

- PT-Link II in need of an update (powered up, no other connections necessary)
- Computer running Microsoft Windows™ operating system
- Prism II software from www.orioncontrols.com/software-new.html
- Latest version of PT-Link II software (e-mailed from our tech support staff or downloaded from any of our websites) and software sheet
- USB Driver Setup.exe file located on PT-Link II CD or downloaded from any of our websites
- USB cable

Follow these simple steps to update the PT-Link II:

1.) Turn on your computer and download the latest Prism II software from www.orioncontrols.com/software-new.html.

2.) Either download the PT-Link II update file from <http://techsupport.wattmaster.com> or save the file to your computer from the e-mail you received from Tech Support. Record the path and name of the file for later use. Also, print the software sheet provided for future reference.

3.) Run the USB Driver Setup.exe file (found on the PT-Link II CD or downloaded from any of our websites) so that Prism can communicate to the PT Link II. Unzip the file to the directory where you saved your PT-Link II software.

4.) Plug the USB cable into the computer's and PT-Link II's USB ports.


5.) A message will pop-up from the lower menu bar of Windows that reads, "Found New Hardware." Click on this message and follow the instructions that appear to install the USB drivers.

6.) Open Prism II and Login with the password "Flash." If successful, "Level 4 Access" will appear at the lower right of the Prism program.

7.) Click on the <Job-Site> icon. The *Job-Sites Window* will appear. In the *Type of CommLink Dialog Box*, select "Hi Speed CommLink."




8.) In the *Job-Sites Window*, from the Serial Port drop down list, select the correct COM port. If you don't know the COM port number or if the number is 10 or higher, follow the directions on pages 19-20.

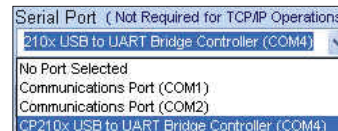

9.) From Prism II's Communications tab, select "Flash Selected Controller."



10.) The *Flash Controller Window* will appear.

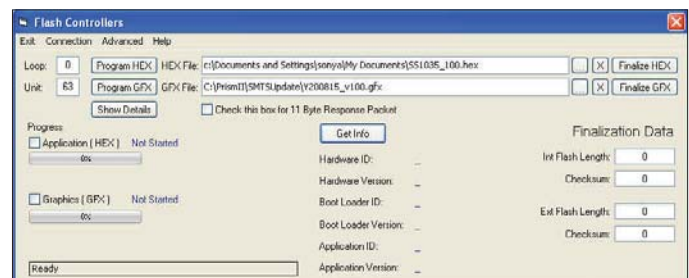

11.) From the *Flash Controller Window's* Connection tab, select "Direct". Keep the *Flash Controller Window* open.




12.) Cycle power to the PT-Link II and within 5 seconds, click the <Get Info> button in the *Flash Controller Window*. The PT-Link II information will now appear in the window under the <Get Info> button.




Updating the PT-Link II Controller

13.) The Application ID should be SS1035 and the Application Version should match the software version you will be updating to.

14.) In the HEX File field, enter the path and name of the HEX file you downloaded and/or copied to your hard drive. Use the Browse button (...) to the right of the field if you need help in locating the file.




15.) Now, cycle power to the PT-Link II once again and within 5 seconds click on the <Program HEX> button (shown above). If successful, you should see the Progress Application HEX bar showing the progress percentage.

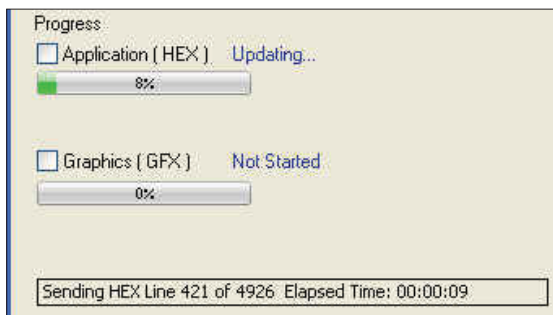

16.) When the bar shows 100% completed, verify the PT-Link II's software is running by observing the Timer LED blinking.

17.) Verify the PT-Link II's Application Version by once again cycling power to the PT-Link II and within 5 seconds clicking the <Get Info> button.

18.) Verify all fields are correct in the information below the <Get Info> button and under "Finalization Data." The "Int Flash Length" and "Checksum" values should match the values provided with the software sheet.

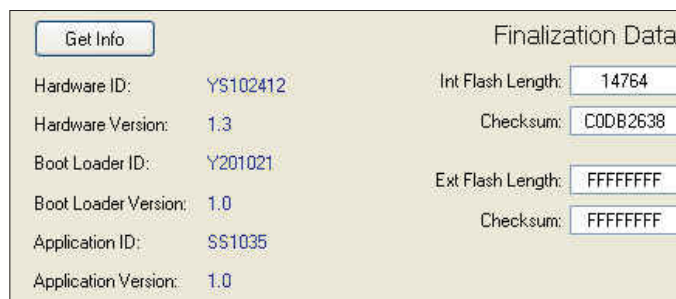


Finding What COM Port Number the CommLink IV is Using

1. *Left-click* on <Start>, located on the bottom left of the Windows Tool Bar.



2. *Select* <Control Panel>.

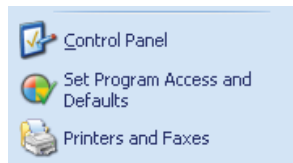


3. *Double-click* the System Icon.




System

4. *Click* the <Hardware> tab.

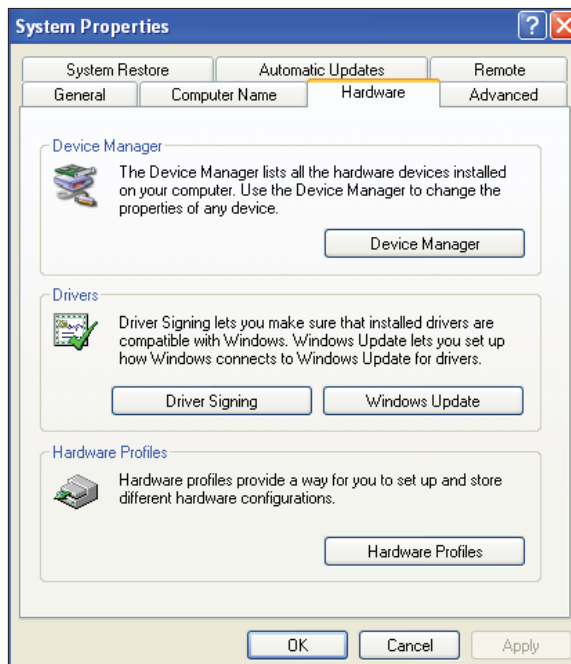

5. *Click* the <Device Manager> button.

6. *Click* on the plus sign next to Ports to see all of the common ports.

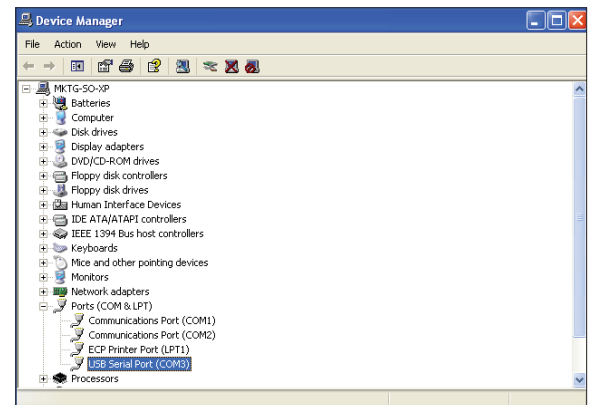


7. *Locate* the USB Serial Port (COM#). The COM# in parentheses is the port it is located on. *Write* this COM port number down. You will need to know this when setting up the Prism software.
8. If the COM port number is 10 or greater, go to “Changing the USB COM Port Number” on page 20.

Updating the PT-Link II Controller


Changing the USB COM Port Number

When the CommLink is first plugged in, it will be assigned a COM port number to be used for communicating with the Prism software. If the port number is 10 or greater, it needs to be changed to a value less than 10 to be recognized by Prism.


1. Click <Start>, click <Control Panel>, click <System>, click the <Hardware> tab, and then click <Device Manager> to get to the *Device Manager Window*.
2. Click on the plus sign next to Ports to see all of the COM ports.

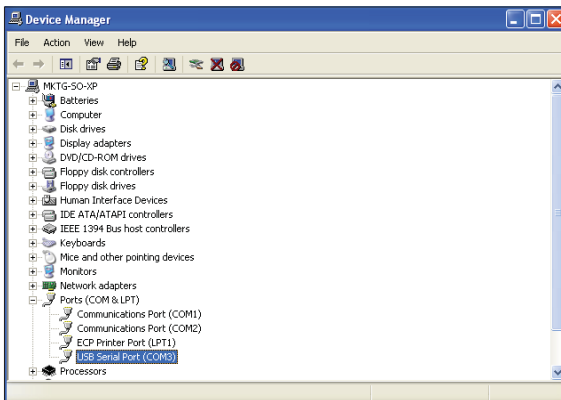

3. Right-click on “USB Serial Port (COM#)” and select <Properties>. In the *Properties Window*, select the <Port Settings> tab.

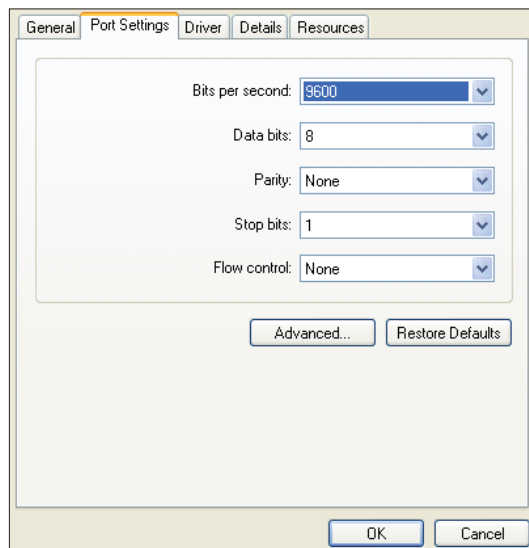

4. To assign a port number less than 10, click on <Advanced>. The *Advanced Settings Window* will appear.

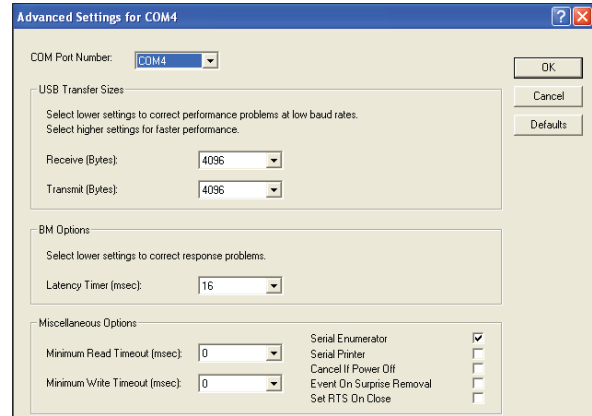

5. In the COM Port Number drop box, select which COM port you wish to use. Make sure you select a COM port number that is not currently in use (you can see the ports in use in the *Device Manager Window*). Select a port that is less than 10.

NOTE: Windows® will assign a port number to every device that has ever been installed on your computer. So if there are no available ports below 10, choose a port number less than 10 for a device listed that you know you are not currently using.

6. Once you select the correct COM port number, click <OK> and close any windows opened in the process of changing the port number. Make note of this number because you will need it for your Prism setup.

VCB-X & VCM-X Modular Data Arrays

| VCB-X Modular Data Array For Field Server | | | | | | | | |
|---|-----------|----------|----------|----------|----------|----------|-----------|-----------|
| Offset | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 0 | AppVer | ClSt | HtSt | SpCtp | SaTp | OaTp | UnitMode | CtrlSts |
| 8 | ClEnbl | HtEnbl | EcoEnbl | FanDly | OnRlys | EcoPos | VfdBwPos | AlmSts |
| 16 | AlmGrp1 | AlmGrp2 | AlmGrp3 | CtrlTp | InRh | InRhStM | MdClPos | MdHtPos |
| 24 | OcpClSt | OcpHtSt | UnClOst | UnHtOst | SaClSt | SaHtSt | SpCtpOst | SaTpOst |
| 32 | OaTpOst | SchdFrc | OnRly1 | OnRly2 | OnRly3 | OnRly4 | OnRly5 | OnRly6 |
| 40 | MnExRly1 | MnExRly2 | MnExRly3 | MnExRly4 | MnExRly5 | RIExRly1 | RIExRly2 | RIExRly3 |
| 48 | RIExRly4 | RIExRly5 | RIExRly6 | RIExRly7 | RIExRly8 | RIExRly9 | RIExRly10 | RIExRly11 |
| 56 | RIExRly12 | MinEcoSt | OaCFM | EtCFM | SaCFM | FrcHvacM | FrcFanSp | FrcEcono |
| 64 | SaTpStM | RaTp | OaRh | StaticPr | CO2 | BuildPr | EtFnSpd | CoilTp |
| 72 | RaCFM | HeadPr | RtVlvPos | LvWtrTp | MdGsVPos | HeadPrSt | CdCtrSg1 | OaClSt |
| 80 | OaHtSt | WmupTg | RhDewpSt | EcoEnbSt | RaTpOst | ColTpOft | LWAmbnt | PreHtAmb |
| 88 | CO2MinLv | CO2MaxLv | InRhSt | StatPrSt | RfPrSt | OACfmMin | HiInRh | ClHdPrSt |
| 96 | HtHdPrSt | LoClTpSt | HiClTpSt | – | – | – | – | – |

Table 3: VCB-X Modular Data Array For Field Server

| VCM-X Modular Data Array For Field Server | | | | | | | | |
|---|---------|----------|----------|----------|----------|----------|----------|----------|
| Offset | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 0 | AppVer | ClSt | HtSt | OaWtbl | TpDmnd | SpCtp | SaTp | RaTp |
| 8 | OaTp | DuctPr | OaRh | UnitMode | CtrlSts | ClEnbl | HtEnbl | EcoEnbl |
| 16 | FanDly | PofCfg | CO2Cfg | MdHt2Ins | Rt2Ins | OnRlys | ExRlys12 | ExRlys34 |
| 24 | EcoPos | VfdBwPos | VfdExPos | AlmSts | AlmGrp1 | AlmGrp2 | AlmGrp3 | SaTpAlm |
| 32 | OaTpAlm | SpCtpAlm | MchClAlm | MchHtAlm | PofAlm | DrtFAlm | SmokeAlm | LoSaAlm |
| 40 | HiSaAlm | CtrlTpCF | CtrlTpHF | CtrlTp | InRh | InRhStM | DptStM | MdClPos |
| 48 | MdHtPos | MdHt2Pos | Rt2Pos | OcpClSt | OcpHtSt | UnClOst | UnHtOst | WtblSt |
| 56 | SaClSt | SaHtSt | WmupSt | SpCtpOst | SaTpOst | RaTpOst | OaTpOst | CoilTpSt |
| 64 | DptSt | InRhSt | DuctPrSt | RfPrSt | SchdFrc | OnRly1 | OnRly2 | OnRly3 |
| 72 | OnRly4 | OnRly5 | ExRly1 | ExRly2 | ExRly3 | ExRly4 | ExRly5 | ExRly6 |
| 80 | ExRly7 | ExRly8 | ExRly9 | ExRly10 | ExRly11 | ExRly12 | ExRly13 | ExRly14 |
| 88 | ExRly15 | ExRly16 | CO2St | MinEcoSt | CO2Level | ByPasDmp | RaDmp | RfPr |
| 96 | OaDwpt | CoilTp | SaTpStM | PreHtSp | OaCFM | EtCFM | SaCFM | OACfmSt |
| 104 | OACfmRs | OACfmStM | MdCmp2 | HdPr1 | HdPr2 | CdFan1 | CdFan2 | RmVFDPos |

Table 4: VCM-X Modular Data Array For Field Server

VCM-X WSHP Tulsa & Coil

| VCM-X WSHP (Tulsa) Data Array For Field Server | | | | | | | | |
|--|----------|----------|----------|----------|----------|----------|----------|----------|
| Offset | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 0 | AppVer | ClSt | HtSt | OaWtbl | TpDmnd | SpCtp | SaTp | RaTp |
| 8 | OaTp | DuctPr | OaRh | UnitMode | CtrlSts | ClEnbl | HtEnbl | EcoEnbl |
| 16 | FanDly | PofCfg | CO2Cfg | MdHt2Ins | Rt2Ins | OnRlys | ExRlys12 | ExRlys34 |
| 24 | EcoPos | VfdBwPos | VfdExPos | AlrmSts | AlrmGrp1 | AlrmGrp2 | AlrmGrp3 | SaTpAlm |
| 32 | OaTpAlm | SpCtpAlm | MchClAlm | MchHtAlm | PofAlm | DrtFAlm | SmokeAlm | LoSaAlm |
| 40 | HiSaAlm | CtrlTpCF | CtrlTpHF | CtrlTp | InRh | InRhStM | DptStM | MdClPos |
| 48 | MdHtPos | MdHt2Pos | Rt2Pos | OcpClSt | OcpHtSt | UnClOst | UnHtOst | WtblSt |
| 56 | SaClSt | SaHtSt | WmupSt | SpCtpOst | SaTpOst | RaTpOst | OaTpOst | CoilTpSt |
| 64 | DptSt | InRhSt | DuctPrSt | RfPrSt | SchDFrc | OnRly1 | OnRly2 | OnRly3 |
| 72 | OnRly4 | OnRly5 | ExRly1 | ExRly2 | ExRly3 | ExRly4 | ExRly5 | ExRly6 |
| 80 | ExRly7 | ExRly8 | ExRly9 | ExRly10 | ExRly11 | ExRly12 | ExRly13 | ExRly14 |
| 88 | ExRly15 | ExRly16 | CO2St | MinEcoSt | CO2Level | ByPasDmp | RaDmp | RfPr |
| 96 | OaDwpt | CoilTp | SaTpStM | PreHtSp | OaCFM | EtCFM | SaCFM | OACfmSt |
| 104 | OACfmRs | OACfmStM | MdCmp2 | HdPr1 | HdPr2 | CdFan1 | CdFan2 | WaterTpA |
| 112 | WaterTpB | A1LSPAlm | A1LktAlm | A2LSPAlm | A2LktAlm | B1LSPAlm | B1LktAlm | B2LSPAlm |
| 120 | B2LktAlm | LWT1Alm | LWT2Alm | POWF1Alm | POWF2Alm | ComMAlm | RmVFDPos | – |

Table 4: VCM-X WSHP (Tulsa) Data Array For Field Server

| VCM-X WSHP (Coil) Data Array For Field Server | | | | | | | | |
|---|----------|----------|----------|----------|----------|----------|----------|----------|
| Offset | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 0 | AppVer | ClSt | HtSt | OaWtbl | TpDmnd | SpCtp | SaTp | RaTp |
| 8 | OaTp | DuctPr | OaRh | UnitMode | CtrlSts | ClEnbl | HtEnbl | EcoEnbl |
| 16 | FanDly | PofCfg | CO2Cfg | MdHt2Ins | Rt2Ins | OnRlys | ExRlys12 | ExRlys34 |
| 24 | EcoPos | VfdBwPos | VfdExPos | AlrmSts | AlrmGrp1 | AlrmGrp2 | AlrmGrp3 | SaTpAlm |
| 32 | OaTpAlm | SpCtpAlm | MchClAlm | MchHtAlm | PofAlm | DrtFAlm | SmokeAlm | LoSaAlm |
| 40 | HiSaAlm | CtrlTpCF | CtrlTpHF | CtrlTp | InRh | InRhStM | DptStM | MdClPos |
| 48 | MdHtPos | MdHt2Pos | Rt2Pos | OcpClSt | OcpHtSt | UnClOst | UnHtOst | WtblSt |
| 56 | SaClSt | SaHtSt | WmupSt | SpCtpOst | SaTpOst | RaTpOst | OaTpOst | CoilTpSt |
| 64 | DptSt | InRhSt | DuctPrSt | RfPrSt | SchDFrc | OnRly1 | OnRly2 | OnRly3 |
| 72 | OnRly4 | OnRly5 | ExRly1 | ExRly2 | ExRly3 | ExRly4 | ExRly5 | ExRly6 |
| 80 | ExRly7 | ExRly8 | ExRly9 | ExRly10 | ExRly11 | ExRly12 | ExRly13 | ExRly14 |
| 88 | ExRly15 | ExRly16 | CO2St | MinEcoSt | CO2Level | ByPasDmp | RaDmp | RfPr |
| 96 | OaDwpt | CoilTp | SaTpStM | PreHtSp | OaCFM | EtCFM | SaCFM | OACfmSt |
| 104 | OACfmRs | OACfmStM | MdCmp2 | HdPr1 | HdPr2 | CdFan1 | CdFan2 | WaterTpA |
| 112 | A1LSPAlm | A1LktAlm | B1LSPAlm | B1LktAlm | LWT1Alm | POWF1Alm | ComMAlm | RmVFDPos |

Table 5: VCM-X WSHP (Coil) Data Array For Field Server

| VCM-X Data Array For Field Server | | | | | | | | |
|-----------------------------------|---------|----------|----------|----------|----------|----------|----------|----------|
| Offset | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 0 | AppVer | ClSt | HtSt | OaWtbl | TpDmnd | SpCtp | SaTp | RaTp |
| 8 | OaTp | DuctPr | OaRh | UnitMode | CtrlSts | ClEnbl | HtEnbl | EcoEnbl |
| 16 | FanDly | PofCfg | CO2Cfg | MdHt2Ins | Rt2Ins | OnRlys | ExRlys12 | ExRlys34 |
| 24 | EcoPos | VfdBwPos | VfdExPos | AlrmSts | AlrmGrp1 | AlrmGrp2 | AlrmGrp3 | SaTpAlm |
| 32 | OaTpAlm | SpCtpAlm | MchClAlm | MchHtAlm | PofAlm | DrtFAlm | SmokeAlm | LoSaAlm |
| 40 | HiSaAlm | CtrlTpCF | CtrlTpHF | CtrlTp | InRh | InRhStM | DptStM | MdClPos |
| 48 | MdHtPos | MdHt2Pos | Rt2Pos | OcpClSt | OcpHtSt | UnClOst | UnHtOst | WtblSt |
| 56 | SaClSt | SaHtSt | WmupSt | SpCtpOst | SaTpOst | RaTpOst | OaTpOst | CoilTpSt |
| 64 | DptSt | InRhSt | DuctPrSt | RfPrSt | SchdFrc | OnRly1 | OnRly2 | OnRly3 |
| 72 | OnRly4 | OnRly5 | ExRly1 | ExRly2 | ExRly3 | ExRly4 | ExRly5 | ExRly6 |
| 80 | ExRly7 | ExRly8 | ExRly9 | ExRly10 | ExRly11 | ExRly12 | ExRly13 | ExRly14 |
| 88 | ExRly15 | ExRly16 | CO2St | MinEcoSt | CO2Level | ByPasDmp | RaDmp | RfPr |
| 96 | OaDwpt | CoilTp | SaTpStM | PreHtSp | OaCFM | EtCFM | SaCFM | OACfmSt |
| 104 | OACfmRs | OACfmStM | – | – | – | – | – | – |

Table 6: VCM-X Data Array For Field Server


| SA Controller Data Array For Field Server | | | | | | | | |
|---|----------|----------|----------|----------|----------|----------|---------|----------|
| Offset | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 0 | AppVer | ClSt | HtSt | TpDmnd | SpCtp | SaTp | DuctPr | UnitMode |
| 8 | CtrlSts | ClEnbl | HtEnbl | EcoEnbl | FanDly | MdHt2Ins | Rt2Ins | EcoPos |
| 16 | VfdBwPos | SaTpAlm | SpCtpAlm | MchClAlm | MchHtAlm | PofAlm | DrtFAlm | LoSaAlm |
| 24 | HiSaAlm | CtrlTpCF | CtrlTpHF | CtrlTp | InRh | InRhStM | DptStM | MdClPos |
| 32 | MdHtPos | MdHt2Pos | Rt2Pos | OcpClSt | OcpHtSt | UnClOst | UnHtOst | SaClSt |
| 40 | SaHtSt | WmupSt | SpCtpOst | SaTpOst | CoilTpSt | DptSt | InRhSt | DuctPrSt |
| 48 | SchdFrc | OnRly1 | OnRly2 | OnRly3 | OnRly4 | OnRly5 | ExRly1 | ExRly2 |
| 56 | ExRly3 | ExRly4 | ExRly5 | ExRly6 | ExRly7 | ExRly8 | ExRly9 | ExRly10 |
| 64 | ExRly11 | ExRly12 | ExRly13 | ExRly14 | ExRly15 | ExRly16 | CoilTp | SaTpStM |
| 72 | PreHtSp | EaTp | EwTp | EaRH | HdPr1 | HdPr2 | CoilTp2 | EaDpt |
| 80 | WSEByp | WSEByp2 | MdCmp2 | CoilTpSt | CdPos1 | CdPos2 | EaTpAlm | EmerAlm |
| 88 | PoWFAlm | DrmAlm | EaTpOst | EwTpOst | – | – | – | – |

Table 7: SA Controller Data Array For Field Server

VCM Data Arrays & Appendix A

| VCM Data Array For Field Server | | | | | | | | |
|---------------------------------|----------|----------|----------|----------|----------|----------|----------|----------|
| Offset | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 0 | AppVer | CISt | HtSt | OaWtbl | TpDmnd | SpCtp | SaTp | RaTp |
| 8 | OaTp | DuctPr | OaRh | UnitMode | CtrlSts | CI Dmnd | HtDmnd | DehmDmnd |
| 16 | CIEnbl | HtEnbl | EcoEnbl | FanDly | WmupDmnd | PofCfg | CO2Cfg | MdHt2Ins |
| 24 | Rt2Ins | OnRlys | ExRlys12 | ExRlys34 | EcoPos | VfdBwPos | VfdExPos | AlrmSts |
| 32 | AlrmGrp1 | AlrmGrp2 | AlrmGrp3 | SaTpAlm | OaTpAlm | SpCtpAlm | MchClAlm | MchHtAlm |
| 40 | PofAlm | DrtFlAlm | SmokeAlm | LoSaAlm | HiSaAlm | CtrlTpCF | CtrlTpHF | CtrlTp |
| 48 | InRh | InRhStM | DptStM | MdClPos | MdHtPos | MdHt2Pos | Rt2Pos | OcpClSt |
| 56 | OcpHtSt | UnClOst | UnHtOst | WtblSt | SaClSt | SaHtSt | WmupSt | SpCtpOst |
| 64 | SaTpOst | RaTpOst | OaTpOst | CoilTpSt | DptSt | InRhSt | DuctPrSt | RfPrSt |
| 72 | SchdFrc | OnRly1 | OnRly2 | OnRly3 | OnRly4 | OnRly5 | ExRly1 | ExRly2 |
| 80 | ExRly3 | ExRly4 | ExRly5 | ExRly6 | ExRly7 | ExRly8 | ExRly9 | ExRly10 |
| 88 | ExRly11 | ExRly12 | ExRly13 | ExRly14 | ExRly15 | ExRly16 | CO2St | MinEcoSt |
| 96 | CO2Level | ByPasDmp | RaDmp | RfPr | OaDwpt | CoilTp | SaTpStM | PreHtSp |

Table 8: VCM Data Array For Field Server

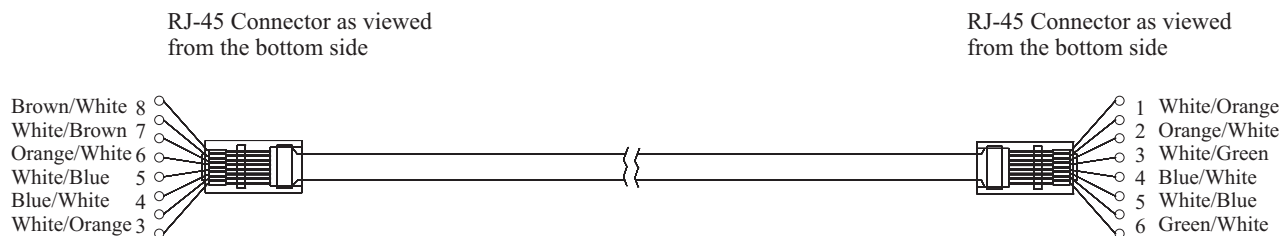

Use the standard EIA/TIA color code for "CROSS OVER CABLE" as shown. It is not the same as a standard Cat 5 patch cabling. The outer cable jacket should be "Orange" in color. This is not a straight thru pin 1 to pin 1 cable.

Figure 25: RJ-45 8P8C Cable for WattMaster Cross Over Networking - WattMaster Part #HZ000136

External Interface Files (XIF Files)

At start-up the PT-Link II LON creates an external interface file (XIF) called fServer.xif based on the information contained in the PT-Link II LON's configuration file (config.csv). The PT-Link II LON's configuration can be changed by uploading and editing the config.csv file; therefore, the XIF file must be obtained by uploading it from the PT-Link II LON.

The recommended procedure for obtaining the XIF file for the PT-Link II LON is to upload it. Remember that this XIF file will change whenever the configuration file has been changed and downloaded and the PT-Link II LON restarted. The following are the steps to extract the external interface file (XIF) from the PT-Link II LON:

- 1.) Start RUI NET application.
- 2.) Select Fieldserver option <1> (this step may be skipped when application auto-detects PT Link).
- 3.) From the *RUI NET Main Menu*, type <A> – Data Array Overview.
- 4.) You should see 2 array items that are labeled wattmstr-dump and wattmstr-stats. Ignore these.
- 5.) You should see 2 additional arrays for the controller connected.

Example: DA_C162_I0 and DA_C162_I0b.

5.1.) The “b” at the end of the Data Array Name indicates that it is a mirror array. You can ignore these.

5.2) Verify that your controller is visible or the XIF will not be generated.

- 6.) After connection has been verified, you can now exit to the *RUI NET Main Menu* by pressing <ESC>.
- 7.) Type <U> – Upload Configuration.
- 8.) Type <O> to select other files.
- 9.) If prompted, *press* any key to continue.
- 10.) Type <R> – Remote Filename.
- 11.) Type <fserver.xif>.
12. You should now see the name fserver.xif in the column to the right.
13. Type <U> to upload the XIF file.
14. Once finished, you will have an .xif file available in the same directory as the RUI NET executable file you were running from.

WARNING: For easier configuration, set the unit address to 1.

Appendix C - VCB-X LON Parameters

| SNVTs for the VCB-X Controller | | | | |
|---------------------------------------|----------|---------------|---|---|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Alarm Group 1 | AlmGrp1 | Analog Output | | See Alarm Group Bits on page 32. |
| Alarm Group 2 | AlmGrp2 | Analog Output | | See Alarm Group Bits on page 32. |
| Alarm Group 3 | AlmGrp3 | Analog Output | | See Alarm Group Bits on page 32. |
| Alarm Status | AlmSts | Analog Output | Indicates that there is an alarm. | 0 = Off 1 = On See Alarm Group Bits on page 32. |
| Application Software Version | AppVer | Analog Output | Current version of the software in the unit. | |
| Unit Mode | UnitMode | Analog Output | | See Unit Mode Bits on page 32. |
| Building Pressure | BuildPr | Analog Output | Current value of the building pressure sensor. | |
| Building Pressure Setpoint | RfPrSt | Analog Input | Current Building Pressure Setpoint. | -.20 .20 |
| CO ₂ | CO2 | Analog Output | Current CO ₂ Level. | |
| CO ₂ Minimum Setpoint | CO2MinLv | Analog Input | This is the threshold CO ₂ level at which the Economizer Min Damper Position Setpoint will begin to be reset higher. | 0 2000 |

| SNVTs for the VCB-X Controller | | | | |
|---------------------------------------|-----------|---------------|--|----------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| CO ₂ Maximum Setpoint | CO2 MaxLv | Analog Input | This is the CO ₂ level at which the Economizer Min Damper Position will be reset to the Economizer Max Position in High CO ₂ . In between the Min and Max CO ₂ levels the Economizer Min Damper Position will be proportionally reset between the configured Min Damper Position and the Max Position in High CO ₂ . | 0 2000 |
| Coil Temperature | CoilTp | Analog Output | Current coil temperature reading. | |
| Coil Temperature Offset | ColTpOfst | Analog Input | If the Coil Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 100 |
| High Coil Temperature Setpoint | HiCiTpSt | Analog Input | This is the highest that the Coil Temperature will be reset to during Space Humidity Reset of the Coil Suction Temperature Setpoint. Produces a dew point in the supply air approximately 10°F above this setpoint. | 35 70 |

Appendix C - VCB-X LON Parameters

| SNVTs for the VCB-X Controller | | | | |
|---------------------------------------|----------|---------------|---|-------------------------------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Low Coil Temperature Setpoint | LoClTpSt | Analog Input | This is the lowest that the Coil Temperature will be reset to during Space Humidity Reset of the Coil Suction Temperature Setpoint. Produces a dewpoint in the supply air approximately 10°F above this setpoint. | 35 70 |
| Condenser Control Signal | CdCtrSgl | Analog Output | Condenser Fan Signal 1 Status. | |
| Control Status | CtrlSts | Analog Output | Current operational status. | See Control Status Bits on page 32. |
| Control Temperature | CtrlTp | Analog Output | Current value of the control temperature sensor. | |
| Cooling Enabled | ClEnbl | Analog Output | Status that indicates mechanical cooling is enabled. | |
| Cooling Setpoint Mirror | ClSt | Analog Output | Occupied Cooling Mode Enable Setpoint Mirror. | |
| Dewpoint Setpoint | RhDewpSt | Analog Input | On a MUA unit, if the outdoor dewpoint rises above this setpoint, the unit will activate Dehumidification. | 35 80 |
| Economizer Enabled | EcoEnbl | Analog Output | Status that indicates the economizer is enabled. | |
| Economizer Enable Setpoint | EcoEnbSt | Analog Input | The economizer is enabled if the outdoor dry-bulb, dewpoint, or wetbulb temperature falls below this setpoint. | -30 80 |

| SNVTs for the VCB-X Controller | | | | |
|---------------------------------------|----------|---------------|---|---|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Economizer Position | EcoPos | Analog Output | Current position of the economizer damper. | |
| Minimum Economizer Position | MinEcoSt | Analog Input | This is the minimum position of the economizer in the occupied mode. | 0 100 |
| Force Economizer | FrcEcono | Analog Input | Overrides all other Outdoor Air Damper position commands so as to maintain this fixed position. Configuring for "Auto" will restore normal unit control of the Outdoor Air Damper/Economizer operation. | 0% 100% Auto=65535 |
| Exhaust Fan CFM | EtCFM | Analog Output | Current Exhaust Airflow Measurement | |
| Exhaust Fan Speed | EtFnSpd | Analog Output | Current position of the VFD relief fan signal. | |
| Fan Starting Delay | FanDly | Analog Output | Indicates the current fan status related to request to run, fan starting delay or POF failure. | 0=No Request 1=Fan Running 2=Fan Start Delay 3=POF Failure |
| Force HVAC Mode | FrcHvacM | Analog Input | Overrides normal controller operation in order to force the unit into this desired mode. Configuring for "Auto" will restore normal unit control of the mode of operation. | 0=Auto 1=Vent 2=Cool 3=Heat 4=Vent Dehum. 5=Cool Dehum. 6=Heat Dehum. |
| Head Pressure | HeadPr | Analog Output | Current value of the Head Pressure Reading. | |

Appendix C - VCB-X LON Parameters

| SNVTs for the VCB-X Controller | | | | | |
|--|----------|---------------|--|---------|---------|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Head Pressure Setpoint | HeadPrSt | Analog Output | Current Head Pressure Setpoint. | | |
| Head Pressure Setpoint in Cooling Mode | CIHdPrSt | Analog Input | This is the Head Pressure Setpoint the unit will control to in the Cooling Mode. | 240 PSI | 420 PSI |
| Head Pressure Setpoint in Reheat Mode | HtHdPrSt | Analog Input | This is the Head Pressure Setpoint the unit will control to in the Dehumidification Reheat Mode. | 240 PSI | 420 PSI |
| Heating Enabled | HtEnbl | Analog Output | Status that indicates that mechanical heating is enabled. | | |
| Heating Setpoint Mirror | HtSt | Analog Output | Occupied Heating Mode Enable Setpoint Mirror. | | |
| Indoor Humidity | InRh | Analog Output | Current value of the indoor humidity sensor. | | |
| Indoor Humidity Setpoint | InRhSt | Analog Input | If Coil Temp Reset is being used this is also the lowest Space RH value that corresponds to the Hi Coil Temp Setpoint. | 0 | 100 |
| High Indoor Humidity Reset Limit | HiInRh | Analog Input | During Coil Temp Reset, this is the highest Space RH value that corresponds to the Low Coil Temp Setpoint. | 0 | 100 |
| Indoor Humidity Setpoint Mirror | InRhStM | Analog Output | Mirror of the InRhSt "read only." | | |
| Leaving Water Temperature | LvWtrTp | Analog Output | Leaving Water Temperature Value | | |

| SNVTs for the VCB-X Controller | | | | | |
|---------------------------------------|----------|---------------|---|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Low Ambient Relay Setpoint | LWAmbnt | Analog Input | Temperature at which the Low Ambient Relay will activate in the Occupied or Unoccupied Mode. | -30 | 70 |
| Modulating Cooling Position | MdClPos | Analog Output | Current position of the modulating cooling signal (Chilled water or digital compressor). | | |
| Modulating Gas Valve Position | MdGsVPos | Analog Output | Current position of MODGAS modulating gas valve control. | | |
| Modulating Heating Position | MdHtPos | Analog Output | Current position of the modulating heating signal (hot water or SCR heat). | | |
| Morning Warm-Up Setpoint | WmupTg | Analog Input | In a VAV application, upon entering the occupied mode, the Warm-up Demand will be activated if the return air temperature falls one degree below this setpoint. | 50 | 90 |
| Occupied Cooling Setpoint | OcpClSt | Analog Input | If the control temperature rises one degree above this setpoint, the control will activate the cooling demand. If the control temperature is the Supply Air Sensor, then the cooling demand is always active. | 1 | 110 |

Appendix D - VCB-X BACnet Parameters

| SNVTs for the VCB-X Controller | | | | | |
|---------------------------------------|----------|---------------|--|--------|------|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Occupied Heating Setpoint | OcpHtSt | Analog Input | If the control temperature drops one degree below this setpoint, the control will activate the heating demand. If the control temperature is the Supply Air Sensor, then there is no heating demand. | 1 | 110 |
| Hood On Outdoor Air Cooling Setpoint | OaClSt | Analog Input | This is the Cooling Mode Enable Setpoint used only in Hood On Mode. | 1 | 110 |
| Hood On Outdoor Air Heating Setpoint | OaHtSt | Analog Input | This is the Heating Mode Enable Setpoint used only in Hood On Mode. | 1 | 110 |
| Outdoor Air CFM | OaCFM | Analog Output | Current Outdoor Airflow Measurement | | |
| Minimum Desired Outdoor Air CFM | OACfmMin | Analog Input | Minimum Outdoor Airflow CFM Setpoint | .10K | 200K |
| Outdoor Humidity | OaRh | Analog Output | Current value of the Outdoor Humidity Sensor. | | |
| Outdoor Air Temperature | OaTp | Analog Output | Current value of the outdoor temperature sensor. | | |

| SNVTs for the VCB-X Controller | | | | | |
|---------------------------------------|----------|---------------|--|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Outdoor Air Temperature Offset | OaTpOst | Analog Input | If the Outdoor Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 | 100 |
| Preheat Relay Setpoint | PreHtAmb | Analog Input | If the Supply Fan is energized this is the temperature at which the Preheat Relay will activate. Operates in the Occupied or Unoccupied Mode. | -30 | 70 |
| Reheat Valve Position | RtVlvPos | Analog Output | Current position of MHGRV modulating hot gas reheat valve. | | |
| Return Air CFM | RaCFM | Analog Output | Current Return Airflow Measurement. | | |
| Return Air Temperature | RaTp | Analog Output | Current value of the return temperature sensor. | | |
| Return Air Temperature Sensor Offset | RaTpOst | Analog Input | If the Return Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 | 100 |
| Schedule Force | SchdFrc | Analog Input | 0 = Auto (uses controller's schedule) 1 = Forced Occupied 2 = Forced Unoccupied | 0 | 2 |

Appendix C - VCB-X LON Parameters

| SNVTs for the VCB-X Controller | | | | |
|---|----------|---------------|---|------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Space Temperature | SpcTp | Analog Output | Current value of the space temperature sensor. | |
| Space Temperature Offset | SpcTpOst | Analog Input | If the Space Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 100 |
| Static Pressure | StaticPr | Analog Output | Current Static Pressure. | |
| Static Pressure Setpoint | StatPrSt | Analog Input | Current Static Pressure Setpoint. | .10 3.0 |
| Supply Air CFM | SaCFM | Analog Output | Current Supply Airflow Measurement. | |
| Supply Air Cooling Setpoint | SaClSt | Analog Input | Supply Air Setpoint in Cooling Mode. | 30 80 |
| Supply Air Heating Setpoint | SaHtSt | Analog Input | Supply Air Setpoint in Heating Mode. | 40 240 |
| Supply Air Temperature | SaTp | Analog Output | Current value of the supply air temperature sensor. | |
| Supply Air Temperature Offset | SaTpOst | Analog Input | If the Supply Air Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 100 |
| Current Supply Air Temperature Setpoint | SaTpStM | Analog Output | Current SAT Cooling or Heating setpoint if there is no reset source; Current calculated SAT setpoint with Reset Source. | |

| SNVTs for the VCB-X Controller | | | | |
|---------------------------------------|----------|---------------|---|-------------------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Unoccupied Cooling Offset | UnClOst | Analog Input | During the Unoccupied Mode of Operation, this Setpoint offsets the Occupied Cooling Setpoint out by this user adjustable amount. If you do not want Cooling to operate during the Unoccupied Mode, use the default setting of 30°F for this setpoint. | 0 30 |
| Unoccupied Heating Offset | UnHtOst | Analog Input | During the Unoccupied Mode of Operation, this Setpoint offsets the Occupied Heating Setpoint out by this user adjustable amount. If you do not want Heating to operate during the Unoccupied Mode, use the default setting of 30°F for this setpoint. | 0 30 |
| VFD Position | VfdBwPos | Analog Output | Current position of the VFD blower fan signal. | |
| Remote VFD Position Setpoint | FrcFanSp | Analog Input | Override to force the VFD to this percentage speed. Configuring "Auto" will restore normal unit control of the VFD speed. | 0% 100% Auto=65535 |
| OnBoard Relay Status | OnRlys | Analog Output | | See page 32. |

Appendix C - VCB-X LON Parameters

| SNVTs for the VCB-X Controller | | | | | SNVTs for the VCB-X Controller | | | | |
|---------------------------------------|----------|---------|---|--------|---------------------------------------|-----------|--------|--|--------|
| Binary Output SNVTs are SNVT_lev_disc | | | | | Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits | Parameter | Name | Object | Description | Limits |
| On Board Relay 1 | OnRly1 | BI: 127 | Current status of VCB-X Main Board relay 1. | | 12 Relay Expansion Module Relay 2 | RIExRly2 | BI:300 | Current status of Relay 2 on the 12 Relay Expansion Module. | |
| On Board Relay 2 | OnRly2 | BI: 128 | Current status of VCB-X Main Board relay 2. | | 12 Relay Expansion Module Relay 3 | RIExRly3 | BI:301 | Current status of Relay 3 on the 12 Relay Expansion Module. | |
| On Board Relay 3 | OnRly3 | BI: 129 | Current status of VCB-X Main Board relay 3. | | 12 Relay Expansion Module Relay 4 | RIExRly4 | BI:302 | Current status of Relay 4 on the 12 Relay Expansion Module. | |
| On Board Relay 4 | OnRly4 | BI: 130 | Current status of VCB-X Main Board relay 4. | | 12 Relay Expansion Module Relay 5 | RIExRly5 | BI:303 | Current status of Relay 5 on the 12 Relay Expansion Module. | |
| On Board Relay 5 | OnRly5 | BI: 131 | Current status of VCB-X Main Board relay 5. | | 12 Relay Expansion Module Relay 6 | RIExRly6 | BI:304 | Current status of Relay 6 on the 12 Relay Expansion Module. | |
| On Board Relay 6 | OnRly6 | BI: 259 | Current status of VCB-X Main Board relay 6. | | 12 Relay Expansion Module Relay 7 | RIExRly7 | BI:305 | Current status of Relay 7 on the 12 Relay Expansion Module. | |
| Expansion Module Relay 1 | MnExRly1 | BI:311 | Current status of Relay 1 on the EM1 Expansion Module. | | 12 Relay Expansion Module Relay 8 | RIExRly8 | BI:306 | Current status of Relay 8 on the 12 Relay Expansion Module. | |
| Expansion Module Relay 2 | MnExRly2 | BI:312 | Current status of Relay 2 on the EM1 Expansion Module. | | 12 Relay Expansion Module Relay 9 | RIExRly9 | BI:307 | Current status of Relay 9 on the 12 Relay Expansion Module. | |
| Expansion Module Relay 3 | MnExRly3 | BI:313 | Current status of Relay 3 on the EM1 Expansion Module. | | 12 Relay Expansion Module Relay 10 | RIExRly10 | BI:308 | Current status of Relay 10 on the 12 Relay Expansion Module. | |
| Expansion Module Relay 4 | MnExRly4 | BI:314 | Current status of Relay 4 on the EM1 Expansion Module. | | 12 Relay Expansion Module Relay 11 | RIExRly11 | BI:309 | Current status of Relay 11 on the 12 Relay Expansion Module. | |
| Expansion Module Relay 5 | MnExRly5 | BI:315 | Current status of Relay 5 on the EM1 Expansion Module. | | 12 Relay Expansion Module Relay 12 | RIExRly12 | BI:310 | Current status of Relay 12 on the 12 Relay Expansion Module. | |
| 12 Relay Expansion Module Relay 1 | RIExRly1 | BI:299 | Current status of Relay 1 on the 12 Relay Expansion Module. | | | | | | |

Appendix C - VCB-X LON Parameters

VCB-X PT-Link II LON®

Property Identifier:

The PT-Link II LON® Link amends the following property identity to the LON® property identifier.

LONPropertyIdentifier :**VcbxUnitMode ::= ENUMERATED {**

| | |
|--------------------|------|
| Unoccupied | (0) |
| Occupied | (1), |
| Override Mode | (2), |
| Holiday Unoccupied | (3), |
| Holiday Occupied | (4), |
| Forced Occupied | (5), |
| Forced Unoccupied | (6), |
| } | |

VcbxControlStatusBits ::= ENUMERATED {

| | |
|-----------------|------|
| Off | (0), |
| Vent Mode | (1), |
| Cooling Mode | (2), |
| Heating Mode | (3), |
| Vent RH Mode | (4), |
| Cooling RH Mode | (5), |
| Heating RH Mode | (6), |
| Warm Up Mode | (7) |
| Defrost Mode | (8) |
| Purge Mode | (9) |
| } | |

VcbxAlarmGroup1Bits ::= BIT STRING {

| | |
|----------------------------|-------|
| Bad Supply Air Sensor | (0), |
| Bad Return Air Sensor | (1), |
| Bad Outside Air Sensor | (2), |
| Bad Space Sensor | (3), |
| Bad Main Expansion Board | (4), |
| Bad Coil Temp Sensor | (5), |
| Bad Co2 Sensor | (6), |
| Bad Discharge Sensor | (7), |
| Bad OA CFM Sensor | (8), |
| Bad Exhaust CFM Sensor | (9), |
| Bad Supply CFM Sensor | (10), |
| Bad Return CFM Sensor | (11), |
| Bad Reheat Module | (12), |
| Bad ModGas Module | (13), |
| Bad Relay Expansion Module | (14) |
| } | |

VcbxAlarmGroup2Bits ::= BIT STRING {

| | |
|----------------------------|------|
| Mechanical Cooling Failure | (0), |
| Mechanical Heating Failure | (1), |
| Fan Proving Alarm | (2), |
| Dirty Filter Alarm | (3), |
| Emergency Shutdown Alarm | (4) |
| } | |

VcbxAlarmGroup3Bits ::= BIT STRING {

| | |
|----------------------------------|------|
| High Supply Air Cutoff | (0), |
| Low Supply Air Cutoff | (1), |
| High Control Mode Signal Alarm | (2), |
| Low Control Mode Signal Alarm | (3), |
| Digital Compressor Cutoff Alarm | (4), |
| Digital Compressor Lockout Alarm | (5), |
| High Head Pressure | (6) |
| } | |

VcbxOnBoardRelaysBits ::= BIT STRING {

| | |
|------------------|------|
| On Board Relay 1 | (0), |
| On Board Relay 2 | (1), |
| On Board Relay 3 | (2), |
| On Board Relay 4 | (3), |
| On Board Relay 5 | (4) |
| On Board Relay 6 | (5) |
| } | |

Appendix D - VCM-X Modular and WSHP LON Parameters

NOTE: The following points for the VCM-X Modular and VCM-X WSHP Controllers are additional points. All points and property identifiers in the VCM-X Controller table (pages 35-40) also apply to the VCM-X Modular and VCM-X WSHP Controllers.

| SNVTs for the VCM-X Modular | | | | | |
|---------------------------------------|----------|---------------|---|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Modulating Compressor 2 | MdCmp2 | Analog Output | Current position of the 2nd Stage of Compressor Modulation. | | |
| Head Pressure 1 | HdPr1 | Analog Output | Head Pressure for 1st Compressor | | |
| Head Pressure 2 | HdPr2 | Analog Output | Head Pressure for 2nd Compressor | | |
| Condenser Fan 1 | CdFan1 | Analog Output | Condenser Fan 1 Signal Status | | |
| Condenser Fan 2 | CdFan2 | Analog Output | Condenser Fan 2 Signal Status | | |
| Remote VFD Reset | RmVFDPos | Analog Input | Remote VFD Position Reset | -1 | 100 |

| SNVTs for the VCM-X WSHP (Tulsa) | | | | | |
|---------------------------------------|----------|---------------|---|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Modulating Compressor 2 | MdCmp2 | Analog Output | Current position of the 2nd Stage of Compressor Modulation. | | |
| Head Pressure 1 | HdPr1 | Analog Output | Head Pressure for 1st Compressor | | |
| Head Pressure 2 | HdPr2 | Analog Output | Head Pressure for 2nd Compressor | | |
| Condenser Fan 1 | CdFan1 | Analog Output | Condenser Fan 1 Signal Status | | |
| Condenser Fan 2 | CdFan2 | Analog Output | Condenser Fan 2 Signal Status | | |
| Water Temp. A | WaterTpA | Analog Output | Current water temperature of refrigerant for System A. | | |
| Water Temp. B | WaterTpB | Analog Output | Current water temperature of refrigerant for System B. | | |
| Remote VFD Reset | RmVFDPos | Analog Input | Remote VFD Position Reset | -1 | 100 |

| SNVTs for the VCM-X WSHP (Tulsa) | | | | | |
|--|----------|---------------|---|--------|--|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Compressor A1 Low Suction Pressure Alarm | A1LSPAlm | Binary Output | Alarm that indicates Suction Pressure for Compressor A1 is below the Low Suction Pressure Cooling (Heating) Setpoint. | | |
| Compressor A1 Lockout Alarm | A1LktAlm | Binary Output | Alarm that indicates Compressor A1 is locked out. | | |
| Compressor A2 Low Suction Pressure Alarm | A2LSPAlm | Binary Output | Alarm that indicates Suction Pressure for Compressor A2 is below the Low Suction Pressure Cooling (Heating) Setpoint. | | |
| Compressor A2 Lockout Alarm | A2LktAlm | Binary Output | Alarm that indicates Compressor A2 is locked out. | | |
| Compressor B1 Low Suction Pressure Alarm | B1LSPAlm | Binary Output | Alarm that indicates Suction Pressure for Compressor B1 is below the Low Suction Pressure Cooling (Heating) Setpoint. | | |
| Compressor B1 Lockout Alarm | B1LktAlm | Binary Output | Alarm that indicates Compressor B1 is locked out. | | |
| Compressor B2 Low Suction Pressure Alarm | B2LSPAlm | Binary Output | Alarm that indicates Suction Pressure for Compressor B2 is below the Low Suction Pressure Cooling (Heating) Setpoint. | | |
| Compressor 4 Lockout Alarm | B2LktAlm | Binary Output | Alarm that indicates Compressor B2 is locked out. | | |
| Low Water Temperature 1 Alarm | LWT1Alm | Binary Output | Alarm that indicates water temperature is below the Leaving Water Safety Setpoint (Heating only) for System A. | | |

Appendix D - VCM-X Modular and WSHP LON Parameters

| SNVTs for the VCM-X WSHP (Tulsa) | | | | | |
|---------------------------------------|----------|---------------|---|--------|--|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Low Water Temperature 2 Alarm | LWT2Alm | Binary Output | Alarm that indicates water temperature is below the Leaving Water Safety Setpoint (Heating only) for System B | | |
| Proof of Water 1 Flow Alarm | POWF1Alm | Binary Output | Alarm that indicates no Proof of Water Flow for System A (A1/A2) | | |
| Proof of Water 2 Flow Alarm | POWF2Alm | Binary Output | Alarm that indicates no Proof of Water Flow for System B (B1/B2) | | |
| Module Communications Alarm | ComMAlm | Binary Output | Alarm that indicates that one or more Modules are not communicating with the VCM-X WSHP Controller. | | |

| SNVTs for the VCM-X WSHP (Coil) | | | | | |
|---|----------|---------------|---|--------|--|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Compressor A Low Suction Pressure Alarm | A1LSPAlm | Binary Output | Alarm that indicates Suction Pressure for Circuit A is below the Low Suction Pressure Cooling (Heating) Setpoint. | | |
| Compressor A Lockout Alarm | A1LktAlm | Binary Output | Alarm that indicates Circuit A Compressors are locked out. | | |
| Compressor B Low Suction Pressure Alarm | B1LSPAlm | Binary Output | Alarm that indicates Suction Pressure for Circuit B is below the Low Suction Pressure Cooling (Heating) Setpoint. | | |
| Compressor B Lockout Alarm | B1LktAlm | Binary Output | Alarm that indicates Circuit B Compressors are locked out. | | |
| Low Water Temperature Alarm | LWT1Alm | Binary Output | Alarm that indicates water temperature is below the Leaving Water Safety Setpoint (Heating only). | | |
| Proof of Water Flow Alarm | POWF1Alm | Binary Output | Alarm that indicates no Proof of Water Flow. | | |
| Module Communications Alarm | ComMAlm | Binary Output | Alarm that indicates that one or more Modules are not communicating with the VCM-X WSHP Controller. | | |

| SNVTs for the VCM-X WSHP (Coil) | | | | | |
|---------------------------------------|----------|---------------|---|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Modulating Compressor 2 | MdCmp2 | Analog Output | Current position of the 2nd Stage of Compressor Modulation. | | |
| Head Pressure 1 | HdPr1 | Analog Output | Head Pressure for 1st Compressor | | |
| Head Pressure 2 | HdPr2 | Analog Output | Head Pressure for 2nd Compressor | | |
| Condenser Fan 1 | CdFan1 | Analog Output | Condenser Fan 1 Signal Status | | |
| Condenser Fan 2 | CdFan2 | Analog Output | Condenser Fan 2 Signal Status | | |
| Water Temp. A | WaterTpA | Analog Output | Current water temperature. | | |
| Remote VFD Reset | RmVFDPoS | Analog Input | Remote VFD Position Reset | -1 | 100 |

Appendix E - VCM-X LON Parameters

| SNVTs for the VCM-X Controller | | | | |
|---|-----------|---------------|--|--------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Alarm Status | AlmSts | Analog Output | | See page 40. |
| Control Status | CtrlSts | Analog Output | Current operational status. | |
| Occupied/ Mode Enable Cooling Setpoint Mirror | ClSt | Analog Output | Occupied/ Mode Enable Cooling Setpoint Mirror. | |
| Control Temperature | CtrlTp | Analog Output | Current value of the control temperature sensor. | |
| Duct Static Pressure | DuctPr | Analog Output | Current value of the duct static pressure sensor. | |
| Economizer Position | EcoPos | Analog Output | Current position of the economizer damper. | |
| Occupied/ Mode Enable Heating Setpoint Mirror | HtSt | Analog Output | Occupied/ Mode Enable Heating Setpoint Mirror. | |
| Modulating Gas Valve Position | MdHt-2Pos | Analog Output | Current position of MODGAS II modulating gas valve control. | |
| On Board Relays | OnRlys | Analog Output | | See page 40. |
| Outdoor Air Dewpoint | OaDwpt | Analog Output | Current calculated outdoor air dewpoint added on version 1.09. | |
| Outdoor Air Humidity | OaRh | Analog Output | Current value of the outdoor humidity sensor. | |
| Outdoor Air Temperature | OaTp | Analog Output | Current value of the outdoor temperature sensor. | |
| Outdoor Air Wetbulb | OaWtbl | Analog Output | Current calculated value of the outdoor wetbulb temperature. | |
| Reheat Value Position | Rt2Pos | Analog Output | Current position of MHGRV modulating hot gas reheat valve control. | |
| Relief Pressure | RfPr | Analog Output | Current value of the building pressure sensor. | |
| Return Air Temperature | RaTp | Analog Output | Current value of the return temperature sensor. | |

| SNVTs for the VCM-X Controller | | | | |
|---------------------------------------|-----------|---------------|--|--------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Indoor Humidity | InRh | Analog Output | Current value of the indoor humidity sensor. | |
| Space Temperature | SpcTp | Analog Output | Current value of the space temperature sensor. | |
| Current Supply Air Setpoint | SaTpStM | Analog Output | Current SAT Cooling or Heating setpoint if there is no reset source; Current calculated SAT setpoint with Reset Source. | |
| Supply Air Temperature | SaTp | Analog Output | Current value of the supply air temperature sensor. | |
| Temperature Demand | TpDmnd | Analog Output | Based on the comparison between the current Control Temperature and the Heating or Cooling Setpoint Temperatures. Does not work for supply air control | |
| VFD Blower Fan | VfdBw-Pos | Analog Output | Current position of the VFD blower fan signal. | |
| VFD Relief Fan | VfdExPos | Analog Output | Current position of the VFD relief fan signal. | |
| Application Software Version | AppVer | Analog Output | Current version of the software in the unit. | |
| Alarm Group 1 | AlrmGrp1 | Analog Output | | See page 40. |
| Alarm Group 2 | AlrmGrp2 | Analog Output | | See page 40. |
| Alarm Group 3 | AlrmGrp3 | Analog Output | | See page 40. |
| Dewpoint Setpoint Mirror | DptStM | Analog Output | Mirror of the DPtSt "read only." | |
| External Relays 1-2 | ExRlys12 | Analog Output | | See page 40. |
| External Relays 3-4 | ExRlys34 | Analog Output | | See page 40. |
| Indoor Rh Setpoint Mirror | InRhStM | Analog Output | Mirror of the InRhSt "read only." | |
| Modulating Cool Position | MdClPos | Analog Output | Current position of the modulating cooling signal (Chilled water or digital compressor). | |

Appendix E - VCM-X LON Parameters

| SNVTs for the VCM-X Controller | | | | |
|--|-----------|----------------|---|--------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Modulating Heat Position | MdHtPos | Analog Output | Current position of the modulating heating signal (hot water or SCR heat). | |
| Unit Mode | UnitMode | Analog Output | | See page 40. |
| Return Air CO ₂ Level | CO2Level | Analog Output | Current value of the CO ₂ sensor. | |
| Bypass Damper Position | ByPas-Dmp | Analog Output | Current position of the bypass damper signal. | |
| Return Damper Position | RaDmp | Analog Output | Current position of the return damper signal. | |
| Coil Temperature | CoilTp | Analog Output | Current coil temperature reading added on version 1.09. | |
| Outdoor Air CFM | OaCFM | Analog Output | Current Outdoor Airflow Measurement | |
| Exhaust CFM | EtCFM | Analog Output4 | Current Exhaust Airflow Measurement | |
| Supply Air CFM | SaCFM | Analog Output | Current Supply Airflow Measurement | |
| Current Calculated OA CFM setpoint | OACfm-StM | Analog Output | Current calculated Outdoor Air CFM based on CO ₂ level. | |
| Dewpoint Setpoint | DptSt | Analog Input | If the outdoor dewpoint rises above this setpoint, the unit will activate the Dehumidification Demand. | 35 80 |
| Occupied/ Mode Enable Cooling Setpoint | OcpClSt | Analog Input | If the control temperature rises one degree above this setpoint, the control will activate the cooling demand. If the control temperature is the Supply Air Sensor, then the cooling demand is always active. | 0 99 |

| SNVTs for the VCM-X Controller | | | | |
|--|---------|--------------|--|-------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Occupied/ Mode Enable Heating Setpoint | OcpHtSt | Analog Input | If the control temperature drops one degree below this setpoint, the control will activate the heating demand. If the control temperature is the Supply Air Sensor, then there is no heating demand. | 99 |
| Outdoor Air Sensor Offset | OaTpOst | Analog Input | If the Outdoor Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 100 |
| Return Air Sensor Offset | RaTpOst | Analog Input | If the Return Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 100 |
| Schedule Force | SchDFrc | Analog Input | 0 = Auto/ Unoccupied Mode 1 = Forced On 2 = Forced Off | 0 2 |
| Space Sensor Offset | SpTpOst | Analog Input | If the Space Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 100 |
| SAT Cooling Setpoint | SaClSt | Analog Input | Supply Air Setpoint in Cooling Mode. | 40 80 |
| SAT Heating Setpoint | SaHtSt | Analog Input | Supply Air setpoint in Heating Mode. | 40 200 |
| Supply Air Sensor Offset | SaTpOst | Analog Input | If the Supply Air Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 100 |

Appendix E - VCM-X LON Parameters

| SNVTs for the VCM-X Controller | | | | | |
|---------------------------------------|----------|--------------|--|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Warm Up Setpoint | WmupSt | Analog Input | In a VAV application, upon entering the occupied mode, the Warm-up Demand will be activated if the return air temperature falls one degree below this setpoint. | | |
| Wet Bulb Setpoint | WtblSt | Analog Input | The economizer is enabled if the outdoor temperature or wetbulb falls below this setpoint. | 0 | 80 |
| Coil Temperature Setpoint | CoilTpSt | Analog Input | This is the coil suction temperature target during dehumidification mode. Produces dewpoint in the supply air approximately 10°F above this setpoint. | 35 | 70 |
| Relief Pressure Setpoint | RfPrSt | Analog Input | This is the target building pressure to be maintained by the VFD Relief signal. | -0.2 | 0.2 |
| Indoor Humidity Setpoint | InRhSt | Analog Input | If the indoor humidity rises above this setpoint, the unit will activate the Dehumidification Demand. | 0 | 100 |
| Unoccupied Cooling Offset | UnClOst | Analog Input | During the Unoccupied Mode of Operation, this Setpoint spreads the Occupied Cooling Setpoint out by a user adjustable amount. If you do not want Cooling to operate during the Unoccupied Mode, use the default setting of 30°F for these setpoints. | 0 | 30 |

| SNVTs for the VCM-X Controller | | | | | |
|---------------------------------------|----------|--------------|--|--------|-------|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Unoccupied Heating Offset | UnHtOst | Analog Input | During the Unoccupied Mode of Operation, this Setpoint spreads the Occupied Heating Setpoint out by a user adjustable amount. If you do not want Heating to operate during the Unoccupied Mode, use the default setting of 30°F for these setpoints. | 0 | 30 |
| CO ₂ Setpoint | CO2St | Analog Input | When the CO ₂ level rises above the CO ₂ Protection Limit Max Level, the Economizer's Minimum Position will begin to reset open proportionally between the CO ₂ Protection Limit Max Level Setpoint and the Reset Range Setpoint. | 0 | 3000 |
| Minimum Outside Air Setpoint | MinEcoSt | Analog Input | This is the minimum position of the economizer in the occupied modes. | 1 | 100 |
| Static Pressure Setpoint | DuctPrSt | Analog Input | This is the target duct pressure to be maintained by the VFD blower signal. | 0.01 | 3 |
| Preheater Setpoint | PreHtSp | Analog Input | Low Outside Air Ambient Protection Setpoint | 0 | 100 |
| Outdoor Air CFM Setpoint | OACfmSt | Analog Input | Minimum desired Outdoor Air CFM. | 0.10 K | 200 K |
| Outdoor Air CFM Reset Limit | OACfmRs | Analog Input | Maximum desired Outdoor Air CFM when CO ₂ reaches its reset limit. | 0.10 K | 200 K |

Appendix E - VCM-X LON Parameters

| SNVTs for the VCM-X Controller | | | | |
|---------------------------------------|----------|---------------|---|--------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Bad Supply Air Sensor | SaTpAlm | Binary Output | Alarm that indicates a failure in the supply air sensor. | |
| CO ₂ Sensor Installed | CO2Cfg | Binary Output | Status that indicates the CO ₂ function has been configured. | |
| Cooling Enabled | ClEnbl | Binary Output | Status that indicates mechanical cooling is enabled. | |
| Economizer Enabled | EcoEnbl | Binary Output | Status that indicates the economizer is enabled. | |
| Fan Start Up Delay | FanDly | Binary Output | Status that indicates the fan is commanded to run, but it is in the start up delay mode. | |
| Fan Proving Alarm | PofAlm | Binary Output | Alarm that indicates a failure in the flow of the VFD blower. | |
| Heating Enabled | HtEnbl | Binary Output | Status that indicates that mechanical heating is enabled. | |
| High Supply Air Temperature Alarm | HiSaAlm | Binary Output | The Supply Air has risen above the Hi SAT Cutoff Setpoint. Heating stages begin to deactivate and the fan continues to run. | |
| Low Supply Air Temperature Alarm | LoSaAlm | Binary Output | The Supply Air has fallen below the Hi SAT Cutoff Setpoint and cooling stages will begin to deactivate. If the unit is in Economizer, Vent, or Heating Mode the Supply Fan will shut off. | |
| MODGAS II Connected | MdHt2Ins | Binary Output | Status that indicates the MODGAS II controller is connected. | |
| Proof of Flow Configured | PofCfg | Binary Output | Status that indicates the proof of flow function has been configured. | |
| REHEAT II Connected | Rt2Ins | Binary Output | Status that indicates the MHGRV controllers is connected to the system. | |

| SNVTs for the VCM-X Controller | | | | |
|---------------------------------------|----------|---------------|---|--------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Mechanical Cooling Alarm | MchClAlm | Binary Output | Compressor Relays are enabled but the Supply Air Temperature has not fallen 5°F w/in a user-adjustable time period. This does not indicate compressors are active and will not shut the unit down. | |
| Mechanical Heating Alarm | MchHtAlm | Binary Output | Heating Mode has been initiated but the Supply Air Temperature has not risen 5°F w/in a user-adjustable time period. This does not indicate heat stages are active and will not shut the unit down. | |
| Dirty Filter Detected | DrtFlAlm | Binary Output | Alarm that indicates the filters are dirty. | |
| Control Temperature Cool Failure | CtrlTpCF | Binary Output | This alarm is activated if the control temperature does not get within 5°F to the occupied cooling setpoint in an hour in the cooling mode. This alarm is not used in 100% outside air units or supply air control. | |
| Control Temperature Heat Failure | CtrlTpHF | Binary Output | This alarm is activated if the control temperature does not get within 5°F to the occupied heating setpoint in an hour in the heating mode. This alarm is not used in 100% outside air units or supply air control. | |
| Outdoor Air Temperature Lost | OaTpAlm | Binary Output | Alarm that indicates a failure in the outdoor air temperature. | |
| Smoke Detected Alarm | SmokeAlm | Binary Output | Alarm that indicates the Smoke sensor has been activated. | |
| Space Temperature Sensor Lost | SpcTpAlm | Binary Output | Alarm that indicates a failure in the space temperature sensor. | |

| SNVTs for the VCM-X Controller | | | | |
|---------------------------------------|---------|---------------|-----------------------------|--------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| On Board Relay 1 | OnRly1 | Binary Output | Current status of relay 1. | |
| On Board Relay 2 | OnRly2 | Binary Output | Current status of relay 2. | |
| On Board Relay 3 | OnRly3 | Binary Output | Current status of relay 3. | |
| On Board Relay 4 | OnRly4 | Binary Output | Current status of relay 4. | |
| On Board Relay 5 | OnRly5 | Binary Output | Current status of relay 5. | |
| Expansion Relay 1 | ExRly1 | Binary Output | Current status of relay 6. | |
| Expansion Relay 2 | ExRly2 | Binary Output | Current status of relay 7. | |
| Expansion Relay 3 | ExRly3 | Binary Output | Current status of relay 8. | |
| Expansion Relay 4 | ExRly4 | Binary Output | Current status of relay 9. | |
| Expansion Relay 5 | ExRly5 | Binary Output | Current status of relay 10. | |
| Expansion Relay 6 | ExRly6 | Binary Output | Current status of relay 11. | |
| Expansion Relay 7 | ExRly7 | Binary Output | Current status of relay 12. | |
| Expansion Relay 8 | ExRly8 | Binary Output | Current status of relay 13. | |
| Expansion Relay 9 | ExRly9 | Binary Output | Current status of relay 14. | |
| Expansion Relay 10 | ExRly10 | Binary Output | Current status of relay 15. | |
| Expansion Relay 11 | ExRly11 | Binary Output | Current status of relay 16. | |
| Expansion Relay 12 | ExRly12 | Binary Output | Current status of relay 17. | |
| Expansion Relay 13 | ExRly13 | Binary Output | Current status of relay 18. | |
| Expansion Relay 14 | ExRly14 | Binary Output | Current status of relay 19. | |
| Expansion Relay 15 | ExRly15 | Binary Output | Current status of relay 20. | |
| Expansion Relay 16 | ExRly16 | Binary Output | Current status of relay 21. | |

Appendix E - VCM-X LON Parameters

VCM-X PT-Link II LON®

Property Identifier:

The PT-Link II LON® Link amends the following property identity to the LON® property identifier.

LONPropertyIdentifier :**WattLONScheduleForce ::= ENUMERATED {**

```

NormalOperation           (0),
ForceOccupied             (1),
ForceUnoccupied           (2)
}

```

VcmxUnitMode ::= ENUMERATED {

```

Unoccupied                (0),
RemoteContactOccupied     (1),
NormalScheduleOccupied    (2),
PushButtonOrZoneOverride  (3),
HolidayModeActive         (4),
UnoccupiedZoneDemand       (5),
RemoteScheduleOverride     (6),
CurrentOutputForceMode     (7),
SATHighOrLowCutOff        (8),
CO2OverrideInProgress      (9),
PurgeModeActive           (10)
}

```

VcmxControlStatusBits ::= ENUMERATED {

```

Off                        (0),
Vent                       (1),
Cool                       (2),
Heat                       (3),
Dehum                      (4),
Dehum Cool                 (5),
Dehum Heat                 (6),
Warm Up Mode               (7)
}

```

VcmxOnBoardRelaysBits ::= BIT STRING {

```

OnBoardRelay1             (0),
OnBoardRelay2             (1),
OnBoardRelay3             (2),
OnBoardRelay4             (3),
OnBoardRelay5             (4)
}

```

VcmxExternal Relays1-2Bits ::= BIT STRING {

```

ExpansionBoard1Relay1     (0),
ExpansionBoard1Relay2     (1),
ExpansionBoard1Relay3     (2),
ExpansionBoard1Relay4     (3),
ExpansionBoard2Relay1     (4),
ExpansionBoard2Relay2     (5),
ExpansionBoard2Relay3     (6),
ExpansionBoard2Relay4     (7)
}

```

VcmxExternal Relays2-4Bits ::= BIT STRING {

```

ExpansionBoard3Relay1     (0),
ExpansionBoard3Relay2     (1),
ExpansionBoard3Relay3     (2),
ExpansionBoard3Relay4     (3),
ExpansionBoard4Relay1     (4),
ExpansionBoard4Relay2     (5),
ExpansionBoard4Relay3     (6),
ExpansionBoard4Relay4     (7)
}

```

VcmxAlarmStatusBits ::= BIT STRING {

```

Alarm Group1              (0),
Alarm Group2              (1),
Alarm Group3              (2)
}

```

VcmxAlarmGroup1Bits ::= BIT STRING {

```

SupplyTempSensorFailure   (0),
LostOutdoorTempSensorSignal (1),
LostSpaceTempSensorSignal (2)
}

```

VcmxAlarmGroup2Bits ::= BIT STRING {

```

MechanicalCoolingAlarm    (0),
MechanicalHeatingAlarm    (1),
FanProvingAlarm           (2),
DirtyFilterDetected       (3),
SmokeDetected             (4)
}

```

VcmxAlarmGroup3Bits ::= BIT STRING {

```

LowSupplyAirTempAlarm     (0),
HighSupplyAirTempAlarm    (1),
LowControlTempAlarm       (2),
HighControlTempAlarm      (3)
}

```

Appendix F - SA Controller LON Parameters

| SNVTs for the SA Controller | | | |
|---|-----------|---------------|---|
| Binary Output SNVTs are SNVT_lev_disc | | | |
| all other SNVTs are SNVT_count_inc_f | | | |
| Parameter | Name | Object | Description |
| Control Status | CtrlSts | Analog Output | Current operational status. |
| Occupied/ Mode Enable Cooling Setpoint Mirror | CISt | Analog Output | Occupied/ Mode Enable Cooling Setpoint Mirror. |
| Control Temperature | CtrlTp | Analog Output | Current value of the control temperature sensor. |
| Duct Static Pressure | DuctPr | Analog Output | Current value of the duct static pressure sensor. |
| Economizer Position | EcoPos | Analog Output | Current position of the economizer damper. |
| Occupied/ Mode Enable Heating Setpoint Mirror | HtSt | Analog Output | Occupied/ Mode Enable Heating Setpoint Mirror. |
| Modulating Gas Valve Position | MdHt-2Pos | Analog Output | Current position of MODGAS II modulating gas valve control. |
| Reheat Value Position | Rt2Pos | Analog Output | Current position of MHGRV modulating hot gas reheat valve control. |
| Indoor Humidity | InRh | Analog Output | Current value of the indoor humidity sensor. |
| Space Temperature | SpcTp | Analog Output | Current value of the space temperature sensor. |
| Current Supply Air Setpoint | SaTpStM | Analog Output | Current SAT Cooling or Heating setpoint if there is no reset source; Current calculated SAT setpoint with Reset Source. |
| Supply Air Temperature | SaTp | Analog Output | Current value of the supply air temperature sensor. |
| Temperature Demand | TpDmnd | Analog Output | Based on the comparison between the current Control Temperature and the Heating or Cooling Setpoint Temperatures. Does not work for supply air control. |
| VFD Blower Fan | VfdBw-Pos | Analog Output | Current position of the VFD blower fan signal. |
| Application Software Version | AppVer | Analog Output | Current version of the software in the unit. |
| Coil Temperature Setpoint | CoilTpSt | Analog Output | Current Coil Temperature Setpoint. |
| Dewpoint Setpoint Mirror | DptStM | Analog Output | Mirror of the DPTSt "read only." |

| SNVTs for the SA Controller | | | |
|---------------------------------------|----------|---------------|--|
| Binary Output SNVTs are SNVT_lev_disc | | | |
| all other SNVTs are SNVT_count_inc_f | | | |
| Parameter | Name | Object | Description |
| Indoor RH Setpoint Mirror | InRhStM | Analog Output | Mirror of the InRhSt "read only." |
| Modulating Cool Position | MdCIPos | Analog Output | Current position of the modulating cooling signal (Chilled water or digital compressor). |
| Modulating Heat Position | MdHtPos | Analog Output | Current position of the modulating heating signal (hot water or SCR heat). |
| Unit Mode | UnitMode | Analog Output | See page 44. |
| Coil Temperature | CoilTp | Analog Output | Current coil temperature reading added on version 1.09. |
| Modulating Compressor 2 Position | MdCmp2 | Analog Output | Current position of the 2nd Stage of Compressor Modulation. |
| Head Pressure 1 | HdPr1 | Analog Output | Head Pressure for 1st unit. |
| Head Pressure 2 | HdPr2 | Analog Output | Head Pressure for 2nd unit. |
| Entering Air Temperature | EaTp | Analog Output | Temperature of the air that is entering the unit. |
| Entering Water Temperature | EwTp | Analog Output | Temperature of the water that is entering the unit. |
| Entering Air Humidity | EaRh | Analog Output | Relative Humidity of the Entering Air. |
| Coil Temperature 2 | CoilTp2 | Analog Output | Current Coil Temperature for 2nd unit. |
| Entering Air Dewpoint | EaDpt | Analog Output | Current Entering Air Dewpoint |
| Water Side Economizer Bypass | WSEByp | Analog Output | Current Water Side Economizer Bypass Position for 1st unit. |
| Water Side Economizer Bypass 2 | WSEByp2 | Analog Output | Current Water Side Economizer Bypass Position for 2nd unit. |
| Condenser Position 1 | CdPos1 | Analog Output | Current Condenser Position for 1st unit. |
| Condenser Position 2 | CdPos2 | Analog Output | Current Condenser Position for 2nd unit. |

Appendix F - SA Controller LON Parameters

| SNVTs for the SA Controller | | | | | |
|--|----------|--------------|---|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Dewpoint Setpoint | DptSt | Analog Input | If the outdoor dewpoint rises above this setpoint, the unit will activate the Dehumidification Demand. | 35 | 80 |
| Occupied/ Mode Enable Cooling Setpoint | OcpClSt | Analog Input | If the control temperature rises one degree above this setpoint, the control will activate the cooling demand. If the control temperature is the Supply Air Sensor, then the cooling demand is always active. | 0 | 99 |
| Occupied/ Mode Enable Heating Setpoint | OcpHtSt | Analog Input | If the control temperature drops one degree below this setpoint, the control will activate the heating demand. If the control temperature is the Supply Air Sensor, then there is no heating demand. | | 99 |
| Schedule Force | SchdFrc | Analog Input | 0 = Auto/ 1 = Forced On 2 = Forced Off | 0 | 2 |
| Space Sensor Offset | SpcTpOst | Analog Input | If the Space Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 | 100 |
| SAT Cooling Setpoint | SaClSt | Analog Input | Supply Air Setpoint in Cooling Mode. | 40 | 80 |
| SAT Heating Setpoint | SaHtSt | Analog Input | Supply Air Setpoint in Heating Mode. | 40 | 200 |

| SNVTs for the SA Controller | | | | | |
|---------------------------------------|----------|--------------|--|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Supply Air Sensor Offset | SaTpOst | Analog Input | If the Supply Air Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 | 100 |
| Warm Up Setpoint | WmupSt | Analog Input | In a VAV application, upon entering the occupied mode, the Warm-up Demand will be activated if the return air temperature falls one degree below this setpoint. | 50 | 90 |
| Coil Temperature Setpoint | CoilTpSt | Analog Input | This is the coil suction temperature target during dehumidification mode. Produces dewpoint in the supply air approximately 10°F above this setpoint. | 35 | 70 |
| Indoor Humidity Setpoint | InRhSt | Analog Input | If the indoor humidity rises above this setpoint, the unit will activate the Dehumidification Demand. | 0 | 100 |
| Unoccupied Cooling Offset | UnClOst | Analog Input | During the Unoccupied Mode of Operation, this Setpoint spreads the Occupied Cooling Setpoint out by a user adjustable amount. If you do not want Cooling to operate during the Unoccupied Mode, use the default setting of 30°F for these setpoints. | 0 | 30 |

Appendix F - SA Controller LON Parameters

| SNVTs for the SA Controller | | | | | |
|---------------------------------------|----------|---------------|--|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| all other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Unoccupied Heating Offset | UnHtOst | Analog Input | During the Unoccupied Mode of Operation, this Setpoint spreads the Occupied Heating Setpoint out by a user adjustable amount. If you do not want Heating to operate during the Unoccupied Mode, use the default setting of 30°F for these setpoints. | 0 | 30 |
| Static Pressure Setpoint | DuctPrSt | Analog Input | This is the target duct pressure to be maintained by the VFD blower signal. | 0.01 | 3 |
| Preheater Setpoint | PreHtSp | Analog Input | Low Outside Air Ambient Protection Setpoint | 0 | 100 |
| Entering Air Offset Setpoint | EaTpOst | Analog Input | If the Entering Air Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | | |
| Entering Water Offset Setpoint | EwTpOst | Analog Input | If the Entering Water Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | | |
| Bad Supply Air Sensor | SaTpAlm | Binary Output | Alarm that indicates a failure in the supply air sensor. | | |
| Cooling Enabled | ClEnbl | Binary Output | Status that indicates mechanical cooling is enabled. | | |
| Economizer Enabled | EcoEnbl | Binary Output | Status that indicates the economizer is enabled. | | |
| Fan Start Up Delay | FanDly | Binary Output | Status that indicates the fan is commanded to run, but it is in the start up delay mode. | | |

| SNVTs for the SA Controller | | | |
|---------------------------------------|----------|---------------|---|
| Binary Output SNVTs are SNVT_lev_disc | | | |
| all other SNVTs are SNVT_count_inc_f | | | |
| Parameter | Name | Object | Description |
| Fan Proving Alarm | PofAlm | Binary Output | Alarm that indicates a failure in the flow of the VFD blower. |
| Heating Enabled | HtEnbl | Binary Output | Status that indicates that mechanical heating is enabled. |
| High Supply Air Temperature Alarm | HiSaAlm | Binary Output | The Supply Air has risen above the Hi SAT Cutoff Setpoint. Heating stages begin to deactivate and the fan continues to run. |
| Low Supply Air Temperature Alarm | LoSaAlm | Binary Output | The Supply Air has fallen below the Hi SAT Cutoff Setpoint and cooling stages will begin to deactivate. If the unit is in Economizer, Vent, or Heating Mode the Supply Fan will shut off. |
| MODGAS II Connected | MdHt2Ins | Binary Output | Status that indicates the MODGAS II controller is connected. |
| REHEAT II Connected | Rt2Ins | Binary Output | Status that indicates the MHGRV controllers is connected to the system. |
| Mechanical Cooling Alarm | MchClAlm | Binary Output | Compressor Relays are enabled but the Supply Air Temperature has not fallen 5°F w/in a user-adjustable time period. This does not indicate compressors are active and will not shut the unit down. |
| Mechanical Heating Alarm | MchHtAlm | Binary Output | Heating Mode has been initiated but the Supply Air Temperature has not risen 5°F w/in a user-adjustable time period. This does not indicate heat stages are active and will not shut the unit down. |
| Dirty Filter Detected | DrtFlAlm | Binary Output | Alarm that indicates the filters are dirty. |
| Control Temperature Cool Failure | CtrlTpCF | Binary Output | This alarm is activated if the control temperature does not get within 5°F to the occupied cooling setpoint in an hour in the cooling mode. This alarm is not used in 100% outside air units or supply air control. |
| Control Temperature Heat Failure | CtrlTpHF | Binary Output | This alarm is activated if the control temperature does not get within 5°F to the occupied heating setpoint in an hour in the heating mode. This alarm is not used in 100% outside air units or supply air control. |

Appendix F - SA Controller LON Parameters

| SNVTs for the SA Controller | | | |
|---------------------------------------|---------|---------------|---|
| Binary Output SNVTs are SNVT_lev_disc | | | |
| all other SNVTs are SNVT_count_inc_f | | | |
| Parameter | Name | Object | Description |
| Space Temperature Sensor Lost | SpTpAlm | Binary Output | Alarm that indicates a failure in the space temperature sensor. |
| On Board Relay 1 | OnRly1 | Binary Output | Current status of relay 1. |
| On Board Relay 2 | OnRly2 | Binary Output | Current status of relay 2. |
| On Board Relay 3 | OnRly3 | Binary Output | Current status of relay 3. |
| On Board Relay 4 | OnRly4 | Binary Output | Current status of relay 4. |
| On Board Relay 5 | OnRly5 | Binary Output | Current status of relay 5. |
| Expansion Relay 1 | ExRly1 | Binary Output | Current status of relay 6. |
| Expansion Relay 2 | ExRly2 | Binary Output | Current status of relay 7. |
| Expansion Relay 3 | ExRly3 | Binary Output | Current status of relay 8. |
| Expansion Relay 4 | ExRly4 | Binary Output | Current status of relay 9. |
| Expansion Relay 5 | ExRly5 | Binary Output | Current status of relay 10. |
| Expansion Relay 6 | ExRly6 | Binary Output | Current status of relay 11. |
| Expansion Relay 7 | ExRly7 | Binary Output | Current status of relay 12. |
| Expansion Relay 8 | ExRly8 | Binary Output | Current status of relay 13. |
| Expansion Relay 9 | ExRly9 | Binary Output | Current status of relay 14. |
| Expansion Relay 10 | ExRly10 | Binary Output | Current status of relay 15. |
| Expansion Relay 11 | ExRly11 | Binary Output | Current status of relay 16. |
| Expansion Relay 12 | ExRly12 | Binary Output | Current status of relay 17. |
| Expansion Relay 13 | ExRly13 | Binary Output | Current status of relay 18. |
| Expansion Relay 14 | ExRly14 | Binary Output | Current status of relay 19. |
| Expansion Relay 15 | ExRly15 | Binary Output | Current status of relay 20. |
| Expansion Relay 16 | ExRly16 | Binary Output | Current status of relay 21. |
| Emergency Shutdown Alarm | EmerAlm | Binary Output | Alarm that indicates Emergency Shutdown. |
| Drain Pan Overflow | DrnAlm | Binary Output | Alarm that indicates overflow of the drain pan. |

| SNVTs for the SA Controller | | | |
|---------------------------------------|---------|---------------|--|
| Binary Output SNVTs are SNVT_lev_disc | | | |
| all other SNVTs are SNVT_count_inc_f | | | |
| Parameter | Name | Object | Description |
| Proof of Water Flow Alarm | PoWFAlm | Binary Output | Alarm that indicates no Proof of Water Flow. |
| Entering Air Temperature Alarm | EaTpAlm | Binary Output | Alarm that indicates failure in the Entering Air Temperature Sensor. |

SA Controller PT-Link II LON®
Property Identifier:

The PT-Link II LON® Link amends the following property identity to the LON® property identifier.

LONPropertyIdentifier :

```
SAUnitMode ::= ENUMERATED {
    Unoccupied (0),
    RemoteContactOccupied (1),
    NormalScheduleOccupied (2),
    PushButtonOrZoneOverride (3),
    HolidayModeActive (4),
    UnoccupiedZoneDemand (5),
    RemoteScheduleOverride (6),
    CurrentOutputForceMode (7),
    SATHighOrLowCutOff (8),
    CO2OverrideInProgress (9),
    PurgeModeActive (10)
}
```

```
SAControlStatusBits ::= ENUMERATED {
    Off (0),
    Vent (1),
    Cool (2),
    Heat (3),
    Dehum (4),
    Dehum Cool (5),
    Dehum Heat (6),
    Warm Up Mode (7)
}
```

Appendix G - VCM LON Parameters

| SNVTs for the VCM Controller | | | | |
|---|----------|---------------|--|--------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| All other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Application Software Version | AppVer | Analog Output | Current version of the software in the unit. | |
| Alarm Status | AlrmSts | Analog Output | | See page 50. |
| Unit Mode | UnitMode | Analog Output | | See page 50. |
| Control Status | CtrlSts | Analog Output | Current operational status. | |
| Control Temperature | CtrlTp | Analog Output | Current value of the control temperature sensor. | |
| Occupied/ Mode Enable Cooling Setpoint Mirror | ClSt | Analog Output | Occupied/ Mode Enable Cooling Setpoint Mirror. | |
| Duct Static Pressure | DuctPr | Analog Output | Current value of the duct static pressure sensor. | |
| Economizer Position | EcoPos | Analog Output | Current position of the economizer damper. | |
| External Relays 1-2 | ExRlys12 | Analog Output | | See page 50. |
| External Relays 3-4 | ExRlys34 | Analog Output | | See page 50. |
| Indoor Humidity | InRh | Analog Output | Current value of the indoor humidity sensor. | |
| Occupied/ Mode Enable Heating Setpoint Mirror | HtSt | Analog Output | Occupied/ Mode Enable Heating Setpoint Mirror. | |
| On Board Relay | OnRlys | Analog Output | | See page 50. |
| Outdoor Air Humidity | OaRh | Analog Output | Current value of the outdoor humidity sensor. | |
| Outdoor Air Temperature | OaTp | Analog Output | Current value of the outdoor temperature sensor. | |
| Outdoor Air Wetbulb | OaWtbl | Analog Output | Current calculated value of the outdoor wetbulb temperature. | |
| Relief Pressure | RfPr | Analog Output | Current value of the building pressure sensor. | |
| Return Air CO ₂ Level | CO2Level | Analog Output | Current value of the CO ₂ sensor. | |
| Return Air Temperature | RaTp | Analog Output | Current value of the return temperature sensor. | |

| SNVTs for the VCM Controller | | | | |
|---------------------------------------|----------|---------------|---|--------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| All other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Space Temperature | SpcTp | Analog Output | Current value of the space temperature sensor. | |
| Supply Air Temperature | SaTp | Analog Output | Current value of the supply air temperature sensor. | |
| Temperature Demand | TpDmnd | Analog Output | Based on the comparison between the current Control Temperature and the Heating or Cooling Setpoint Temperatures. Does not work for supply air control. | |
| VFD Blower Fan | VfdBwPos | Analog Output | Current position of the VFD blower fan signal. | |
| VFD Relief Fan | VfdExPos | Analog Output | Current position of the VFD relief fan signal. | |
| Modulating Gas Valve Position | MdHt2Pos | Analog Output | Current position of MODGAS II modulating gas valve control. | |
| Reheat Value Position | Rt2Pos | Analog Output | Current position of MHGRV modulating hot gas reheat valve control. | |
| Alarm Group 1 | AlrmGrp1 | Analog Output | | See page 50. |
| Alarm Group 2 | AlrmGrp2 | Analog Output | | See page 50. |
| Alarm Group 3 | AlrmGrp3 | Analog Output | | See page 50. |
| Dewpoint Setpoint Mirror | DptStM | Analog Output | Mirror of the DPTSt "read only." | |
| Indoor RH Setpoint Mirror | InRhStM | Analog Output | Mirror of the InRhSt "read only." | |
| Modulating Cool Position | MdClPos | Analog Output | Current position of the modulating cooling signal (Chilled water or digital compressor). | |
| Modulating Heat Position | MdHtPos | Analog Output | Current position of the modulating heating signal (hot water or SCR heat). | |
| Bypass Damper Position | ByPasDmp | Analog Output | Current position of the bypass damper signal. | |

Appendix G - VCM LON Parameters

| SNVTs for the VCM Controller | | | | | |
|--|----------|---------------|--|--------|------|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| All other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Return Damper Position | RaDmp | Analog Output | Current position of the return damper signal. | | |
| Outdoor Air Dewpoint | OaDwpt | Analog Output | Current calculated outdoor air dewpoint added on version 1.09. | | |
| Current Supply Air Setpoint | SaTpStM | Analog Output | Current SAT Cooling or Heating setpoint if there is no reset source; Current calculated SAT setpoint with Reset Source. | | |
| Coil Temperature | CoilTp | Analog Output | Current coil temperature reading added on version 1.09. | | |
| Preheater Setpoint | PreHtSp | Analog Input | Low Outside Air Ambient Protection Setpoint | 0 | 100 |
| CO ₂ Setpoint | CO2St | Analog Input | When the CO ₂ level rises above the CO ₂ Protection Limit Max Level, the Economizer's Minimum Position will begin to reset open proportionally between the CO ₂ Protection Limit Max Level Setpoint and the Reset Range Setpoint. | 0 | 3000 |
| Static Pressure Setpoint | DuctPrSt | Analog Input | This is the target duct pressure to be maintained by the VFD blower signal. | 0.01 | 3 |
| Minimum Outside Air Setpoint | MinEcoSt | Analog Input | This is the minimum position of the economizer in the occupied modes. | 1 | 100 |
| Occupied/ Mode Enable Cooling Setpoint | OcpClSt | Analog Input | If the control temperature rises one degree above this setpoint, the control will activate the cooling demand. If the control temperature is the Supply Air Sensor, then the cooling demand is always active. | 0 | 99 |

| SNVTs for the VCM Controller | | | | | |
|--|----------|--------------|--|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| All other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Occupied/ Mode Enable Heating Setpoint | OcpHtSt | Analog Input | If the control temperature drops one degree below this setpoint, the control will activate the heating demand. If the control temperature is the Supply Air Sensor, then there is no heating demand. | 0 | 99 |
| Outdoor Air Sensor Offset | OaTpOst | Analog Input | If the Outdoor Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 | 100 |
| Relief Pressure Setpoint | RfPrSt | Analog Input | This is the target building pressure to be maintained by the VFD Relief signal. | -0.2 | 0.2 |
| Return Air Sensor Offset | RaTpOst | Analog Input | If the Return Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 | 100 |
| Schedule Force | SchdFrc | Analog Input | 0 = Auto Unoccupied Mode 1 = Forced On 2 = Forced Off | 0 | 2 |
| Space Sensor Offset | SpcTpOst | Analog Input | If the Space Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 | 100 |
| SAT/Reset Source Cooling Setpoint | SaClSt | Analog Input | Supply Air setpoint or Reset Source target temperature in Cooling Mode. | 40 | 80 |
| SAT/Reset Source Heating Setpoint | SaHtSt | Analog Input | Supply Air setpoint or Reset Source target temperature in Heating Mode. | 40 | 200 |

Appendix G - VCM LON Parameters

| SNVTs for the VCM Controller | | | | | |
|---------------------------------------|---------|--------------|--|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| All other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Supply Air Sensor Offset | SaTpOst | Analog Input | If the Supply Air Temperature Sensor is reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. | -100 | 100 |
| Unoccupied Cooling Offset | UnClOst | Analog Input | During the Unoccupied Mode of Operation, this Setpoint spreads the Occupied Cooling Setpoint out by a user adjustable amount. If you do not want Cooling to operate during the Unoccupied Mode, use the default setting of 30°F for these setpoints. | 0 | 30 |
| Unoccupied Heating Offset | UnHtOst | Analog Input | During the Unoccupied Mode of Operation, this Setpoint spreads the Occupied Heating Setpoint out by a user adjustable amount. If you do not want Heating to operate during the Unoccupied Mode, use the default setting of 30°F for these setpoints. | 0 | 30 |
| Dewpoint Setpoint | DptSt | Analog Input | If the outdoor dewpoint rises above this setpoint, the unit will activate the Dehumidification Demand. | 35 | 80 |

| SNVTs for the VCM Controller | | | | | |
|---------------------------------------|---------|---------------|---|--------|-----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| All other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Indoor Humidity Setpoint | InRhSt | Analog Input | If the indoor humidity rises above this setpoint, the unit will activate the Dehumidification Demand. | 0 | 100 |
| Warm Up Setpoint | WmupSt | Analog Input | In a VAV application, upon entering the occupied mode, the Warm-up Demand will be activated if the return air temperature falls one degree below this setpoint. | 50 | 90 |
| Wet Bulb Setpoint | WtblSt | Analog Input | The economizer is enabled if the outdoor temperature or wetbulb falls below this setpoint. | 0 | 80 |
| Bad Supply Air Sensor | SaTpAlm | Binary Output | Alarm that indicates a failure in the supply air sensor. | | |
| CO ₂ Sensor Installed | CO2Cfg | Binary Output | Status that indicates the CO ₂ function has been configured. | | |
| Cooling Demand | ClDmnd | Binary Output | Status that indicates a demand for cooling. | | |
| Cooling Enabled | ClEnbl | Binary Output | Status that indicates mechanical cooling is enabled. | | |
| Economizer Enabled | EcoEnbl | Binary Output | Status that indicates the economizer is enabled. | | |
| Fan Start Up Delay | FanDly | Binary Output | Status that indicates the fan is commanded to run, but it is in the start up delay mode. | | |
| Fan Proving Alarm | PofAlm | Binary Output | Alarm that indicates a failure in the flow of the VFD blower. | | |
| Heating Demand | HtDmnd | Binary Output | Status that indicates a demand for heating. | | |

Appendix G - VCM LON Parameters

| SNVTs for the VCM Controller | | | | | |
|---------------------------------------|----------|---------------|--|--------|----|
| Binary Output SNVTs are SNVT_lev_disc | | | | | |
| All other SNVTs are SNVT_count_inc_f | | | | | |
| Parameter | Name | Object | Description | Limits | |
| Coil Temperature Setpoint | CoilTpSt | Analog Input | This is the coil suction temperature during dehumidification mode. Produces dewpoint in the supply air approximately 10°F above this setpoint. | 35 | 70 |
| Heating Enabled | HtEnbl | Binary Output | Status that indicates that mechanical heating is enabled. | | |
| High Supply Air Temperature Alarm | HiSaAlm | Binary Output | The Supply Air has risen above the Hi SAT Cutoff Setpoint. Heating stages begin to deactivate and the fan continues to run. | | |
| Low Supply Air Temperature Alarm | LoSaAlm | Binary Output | The Supply Air has fallen below the Hi SAT Cutoff Setpoint and cooling stages will begin to deactivate. If the unit is in Economizer, Vent, or Heating Mode the Supply Fan will shut off. | | |
| MODGAS II Connected | MdHt2Ins | Binary Output | Status that indicates the MODGAS II controller is connected. | | |
| Proof of Flow Configured | PofCfg | Binary Output | Status that indicates the proof of flow function has been configured. | | |
| REHEAT II Connected | Rt2Ins | Binary Output | Status that indicates the MHGRV controllers is connected to the system. | | |
| Warm Up Mode Active | WmupDmnd | Binary Output | Status that indicates the control is in the Warm-up mode. | | |
| Mechanical Cooling Alarm | MchClAlm | Binary Output | Compressor Relays are enabled but the Supply Air Temperature has not fallen 5°F w/in a user-adjustable time period. This does not indicate compressors are active and will not shut the unit down. | | |

| SNVTs for the VCM Controller | | | | |
|---------------------------------------|----------|---------------|---|--------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| All other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Mechanical Heating Alarm | MchHtAlm | Binary Output | Heating Mode has been initiated but the Supply Air Temperature has not risen 5°F w/in a user-adjustable time period. This does not indicate heat stages are active and will not shut the unit down. | |
| Dirty Filter Detected | DrtFlAlm | Binary Output | Alarm that indicates the filters are dirty. | |
| Control Temperature Cool Failure | CtrlTpCF | Binary Output | This alarm is activated if the control temperature does not get within 5°F to the occupied cooling setpoint in an hour in the cooling mode. This alarm is not used in 100% outside air units or supply air control. | |
| Control Temperature Heat Failure | CtrlTpHF | Binary Output | This alarm is activated if the control temperature does not get within 5°F to the occupied heating setpoint in an hour in the heating mode. This alarm is not used in 100% outside air units or supply air control. | |
| Dehumidification Demand | DehmDmnd | Binary Output | Status that indicates a demand for dehumidification. | |
| Outdoor Air Temperature Lost | OaTpAlm | Binary Output | Alarm that indicates a failure in the outdoor air temperature. | |
| Smoke Detected Alarm | SmokeAlm | Binary Output | Alarm that indicates the Smoke sensor has been activated. | |
| Space Temperature Sensor Lost | SpcTpAlm | Binary Output | Alarm that indicates a failure in the space temperature sensor. | |
| On Board Relay 1 | OnRly1 | Binary Output | Current status of relay 1. | |
| On Board Relay 2 | OnRly2 | Binary Output | Current status of relay 2. | |
| On Board Relay 3 | OnRly3 | Binary Output | Current status of relay 3. | |
| On Board Relay 4 | OnRly4 | Binary Output | Current status of relay 4. | |
| On Board Relay 5 | OnRly5 | Binary Output | Current status of relay 5. | |

| SNVTs for the VCM Controller | | | | |
|--|-------------|---------------|-----------------------------|---------------|
| Binary Output SNVTs are SNVT_lev_disc | | | | |
| All other SNVTs are SNVT_count_inc_f | | | | |
| Parameter | Name | Object | Description | Limits |
| Expansion Relay 1 | ExRly1 | Binary Output | Current status of relay 6. | |
| Expansion Relay 2 | ExRly2 | Binary Output | Current status of relay 7. | |
| Expansion Relay 3 | ExRly3 | Binary Output | Current status of relay 8. | |
| Expansion Relay 4 | ExRly4 | Binary Output | Current status of relay 9. | |
| Expansion Relay 5 | ExRly5 | Binary Output | Current status of relay 10. | |
| Expansion Relay 6 | ExRly6 | Binary Output | Current status of relay 11. | |
| Expansion Relay 7 | ExRly7 | Binary Output | Current status of relay 12. | |
| Expansion Relay 8 | ExRly8 | Binary Output | Current status of relay 13. | |
| Expansion Relay 9 | ExRly9 | Binary Output | Current status of relay 14. | |
| Expansion Relay 10 | ExRly10 | Binary Output | Current status of relay 15. | |
| Expansion Relay 11 | ExRly11 | Binary Output | Current status of relay 16. | |
| Expansion Relay 12 | ExRly12 | Binary Output | Current status of relay 17. | |
| Expansion Relay 13 | ExRly13 | Binary Output | Current status of relay 18. | |
| Expansion Relay 14 | ExRly14 | Binary Output | Current status of relay 19. | |
| Expansion Relay 15 | ExRly15 | Binary Output | Current status of relay 20. | |
| Expansion Relay 16 | ExRly16 | Binary Output | Current status of relay 21. | |

Appendix G - VCM LON Parameters

VCM PT-Link II LON® Property Identifier:

The PT-Link II LON® Link amends the following property identity to the LON® property identifier.

LONPropertyIdentifier :

WattLONScheduleForce ::= ENUMERATED {

```

NormalOperation          (0),
ForceOccupied           (1),
ForceUnoccupied         (2)
}

```

VcmUnitMode ::= ENUMERATED {

```

Unoccupied              (0),
RemoteContactOccupied  (1),
NormalScheduleOccupied (2),
PushButtonOrZoneOverride (3),
HolidayModeActive      (4),
UnoccupiedZoneDemand   (5),
RemoteScheduleOverride (6),
CurrentOutputForceMode (7),
SATHighOrLowCutOff    (8),
CO2OverrideInProgress  (9),
PurgeModeActive        (10)
}

```

VcmControlStatusBits ::= BIT STRING {

```

AhuControlEconomizer   (0),
NoOutdoorAirTempSensor (1),
CarbonDioxideSensorPresent (2),
HeatCoolStagingDisabled (3),
DehumidificationMode   (4),
ModGasIIConnected      (5),
ReheatIIConnected      (6)
}

```

VcmOnBoardRelaysBits ::= BIT STRING {

```

OnBoardRelay1          (0),
OnBoardRelay2          (1),
OnBoardRelay3          (2),
OnBoardRelay4          (3),
OnBoardRelay5          (4)
}

```

VcmExternal Relays1-2Bits ::= BIT STRING {

```

ExpansionBoard1Relay1  (0),
ExpansionBoard1Relay2  (1),
ExpansionBoard1Relay3  (2),
ExpansionBoard1Relay4  (3),
ExpansionBoard2Relay1  (4),
ExpansionBoard2Relay2  (5),
ExpansionBoard2Relay3  (6),
ExpansionBoard2Relay4  (7)
}

```

VcmExternal Relays2-4Bits ::= BIT STRING {

```

ExpansionBoard3Relay1  (0),
ExpansionBoard3Relay2  (1),
ExpansionBoard3Relay3  (2),
ExpansionBoard3Relay4  (3),
ExpansionBoard4Relay1  (4),
ExpansionBoard4Relay2  (5),
ExpansionBoard4Relay3  (6),
ExpansionBoard4Relay4  (7)
}

```

VcmAlarmStatusBits ::= BIT STRING {

```

Alarm Group1           (0),
Alarm Group2           (1),
Alarm Group3           (2)
}

```

VcmAlarmGroup1Bits ::= BIT STRING {

```

SupplyTempSensorFailure (0),
LostOutdoorTempSensorSignal (1),
LostSpaceTempSensorSignal (2)
}

```

VcmAlarmGroup2Bits ::= BIT STRING {

```

MechanicalCoolingAlarm (0),
MechanicalHeatingAlarm (1),
FanProvingAlarm        (2),
DirtyFilterDetected    (3),
SmokeDetected          (4)
}

```

VcmAlarmGroup3Bits ::= BIT STRING {

```

LowSupplyAirTempAlarm (0),
HighSupplyAirTempAlarm (1),
LowControlTempAlarm   (2),
HighControlTempAlarm  (3)
}

```




Form: OR-PTLNK-II-LON-TGD-01E
All rights reserved.

Printed in the USA

January 2012
Copyright 2012

WattMaster Controls Inc. • 8500 NW River Park Drive • Parkville, MO • 64152
Phone (816) 505-1100 www.orioncontrols.com Fax (816) 505-1101